



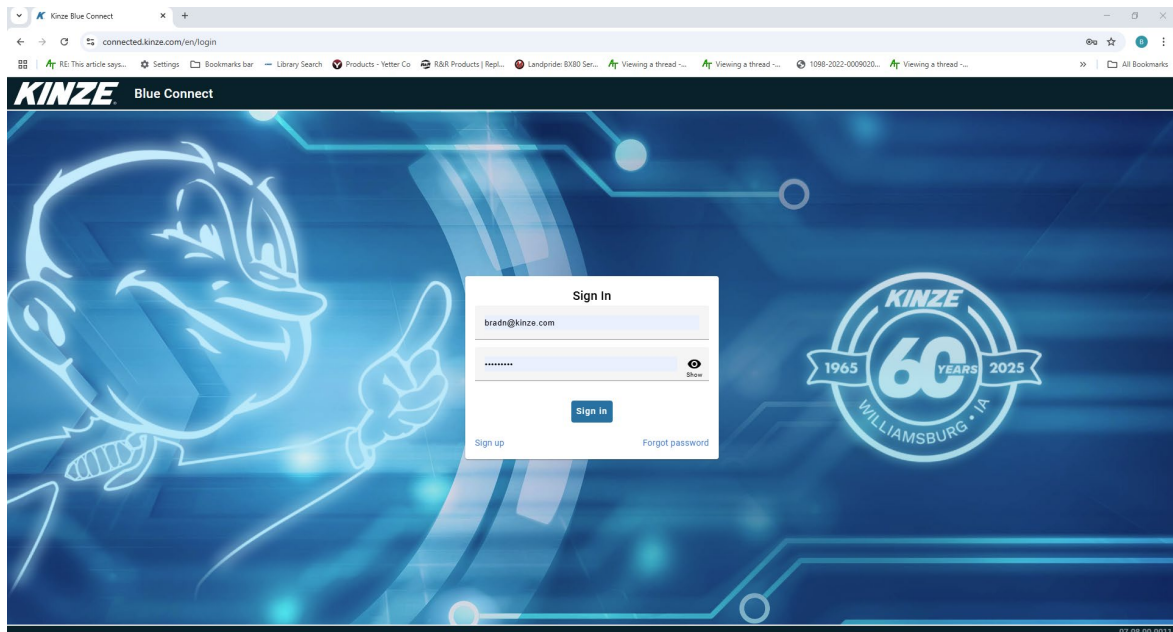


Connecting to John Deere Operations Center™

1. Sign in or Create a Blue Connect account


This can be done at Kinze.com or by clicking on the link <https://connected.kinze.com/en/login>

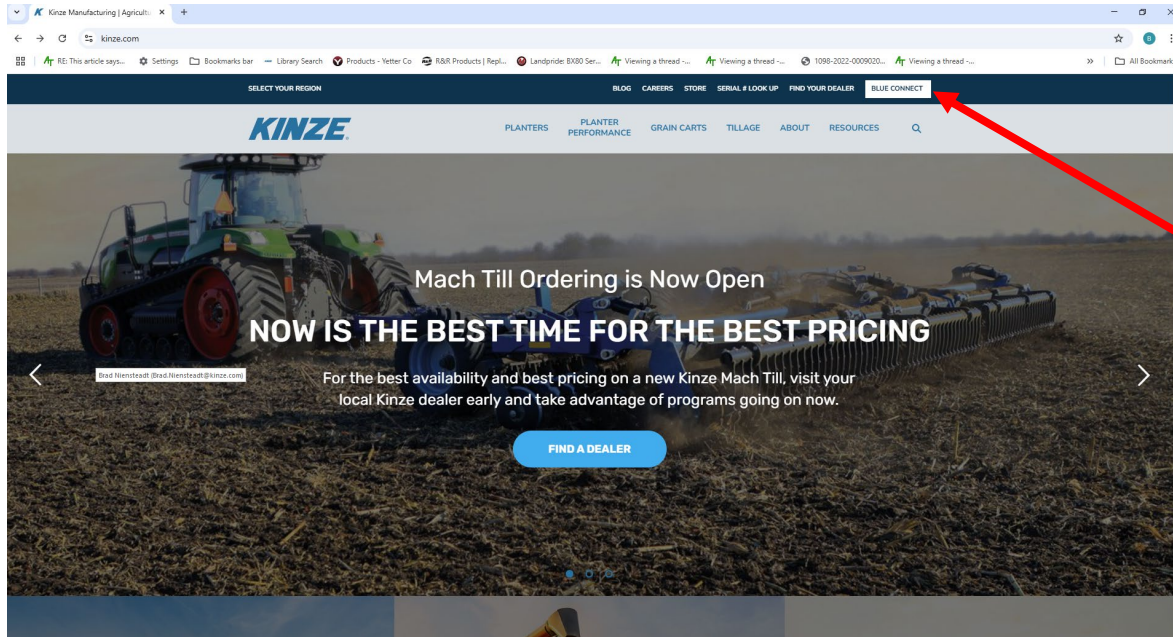


2. Once signed in select settings

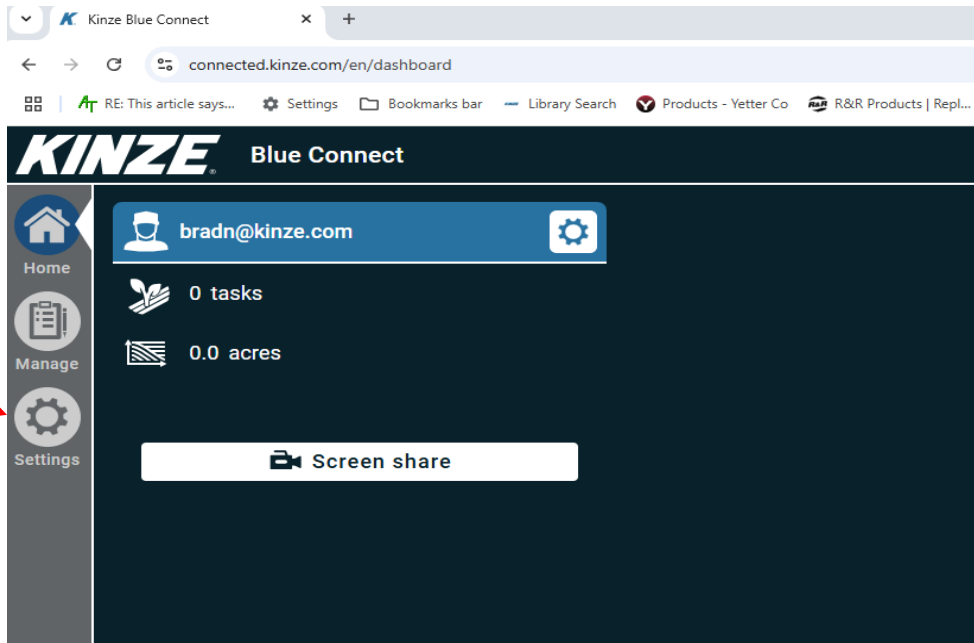


3. Select Connections

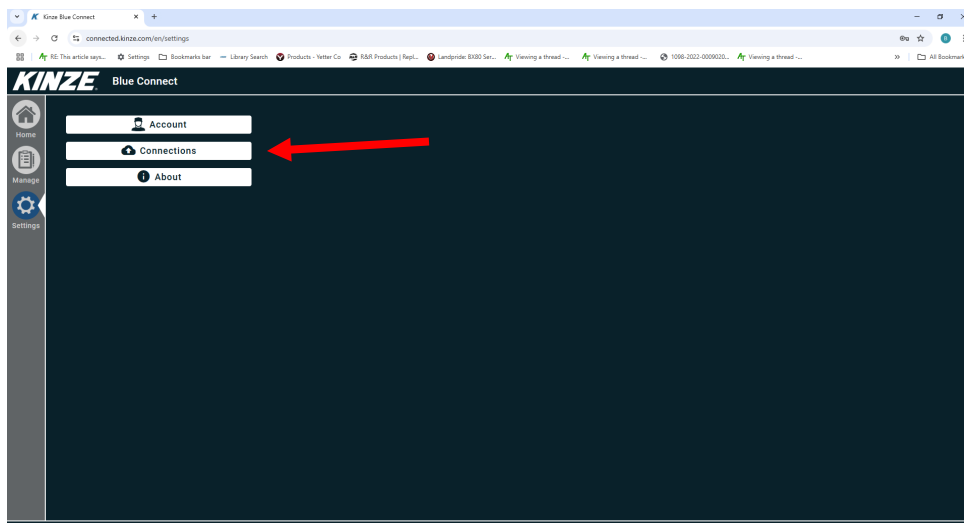


4. Select John Deere Operations Center then click on Connect

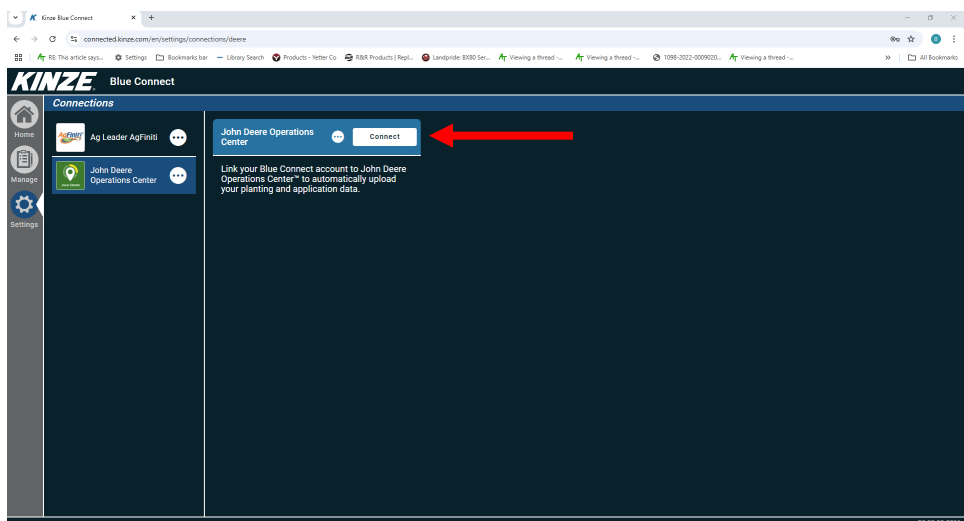


5. A pop up for logging into John Deere Operations center will display and utilize your current login for John Deere Operations center. Follow the steps in the login

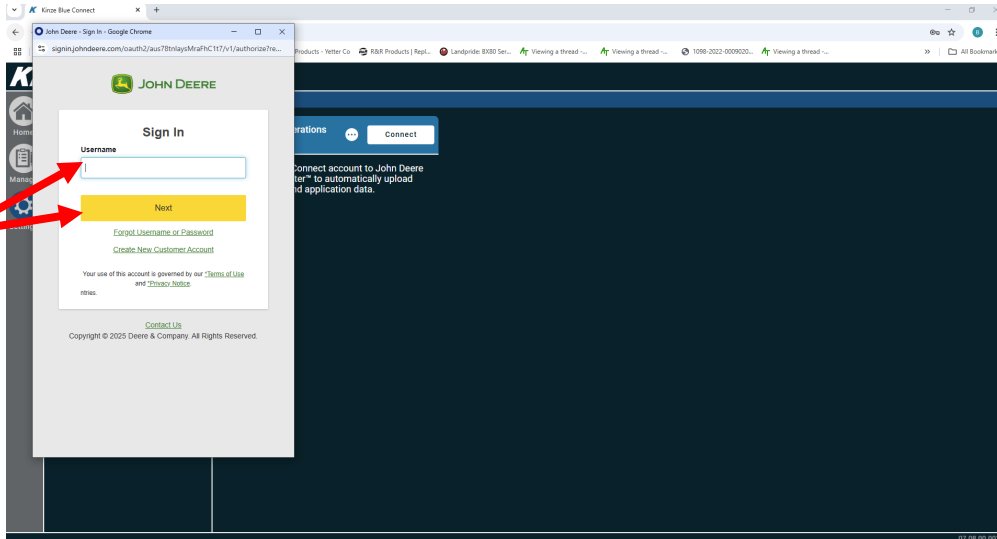


6. Ensure that both boxes are checked when asking for access, then click on Allow Access.

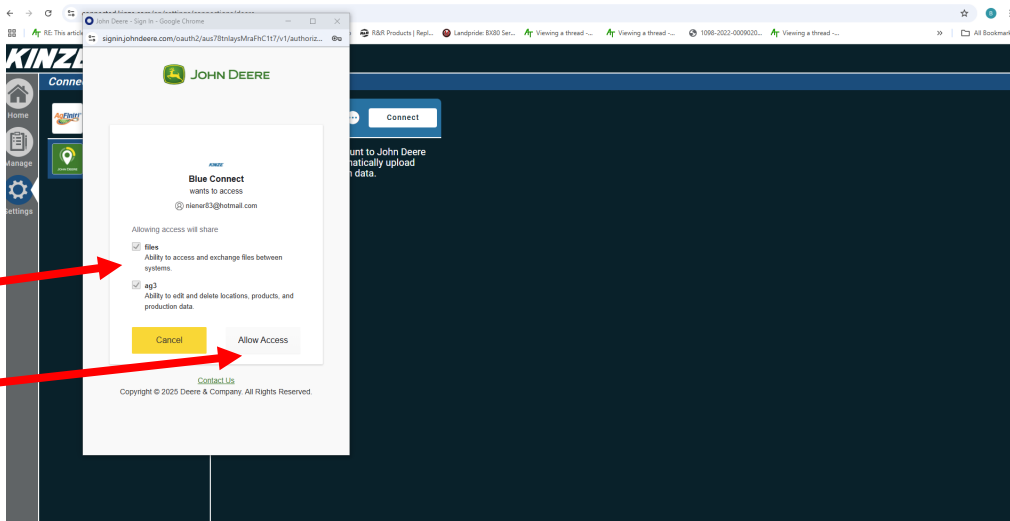


7. You then will be taken to John Deeres website that will allow you to save Kinze Blue Connect as an Organization Connected as show below

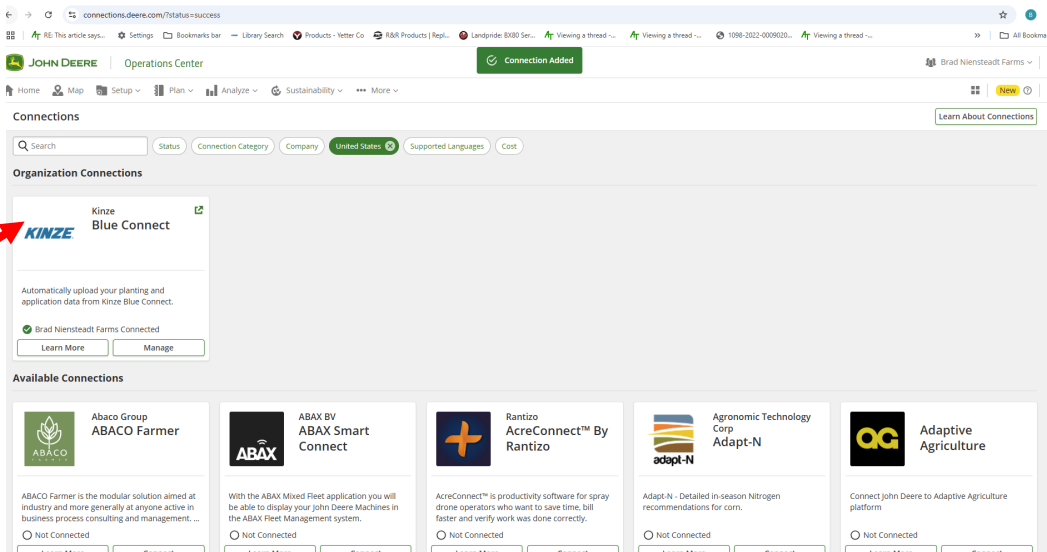

8. You can confirm connection is complete by looking at your Blue Connect Log in page and confirm there is a green check and process is complete

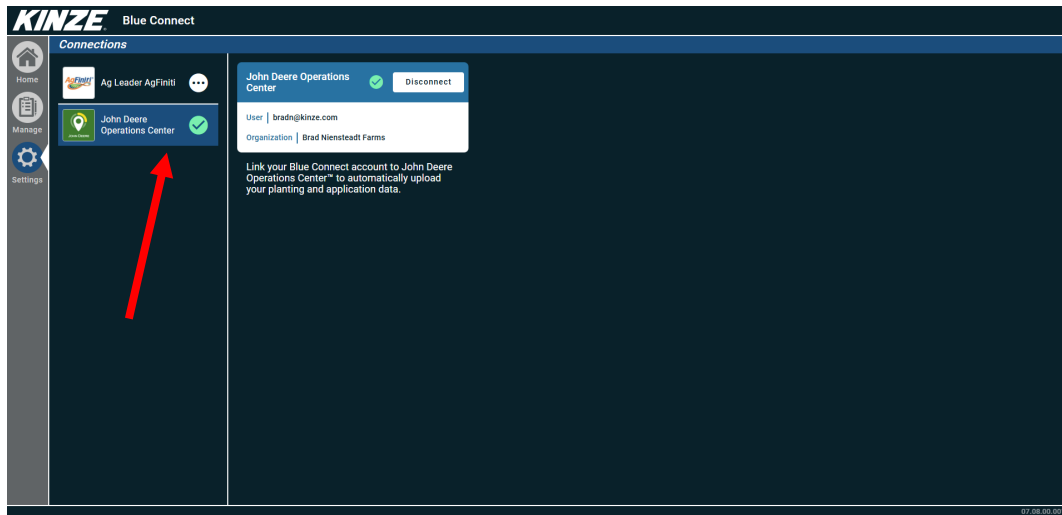

9. Ensure you are logged into your Blue Connect account on the Blue Vantage Tablet by Pressing on Settings and then configure on the Blue Connect page.

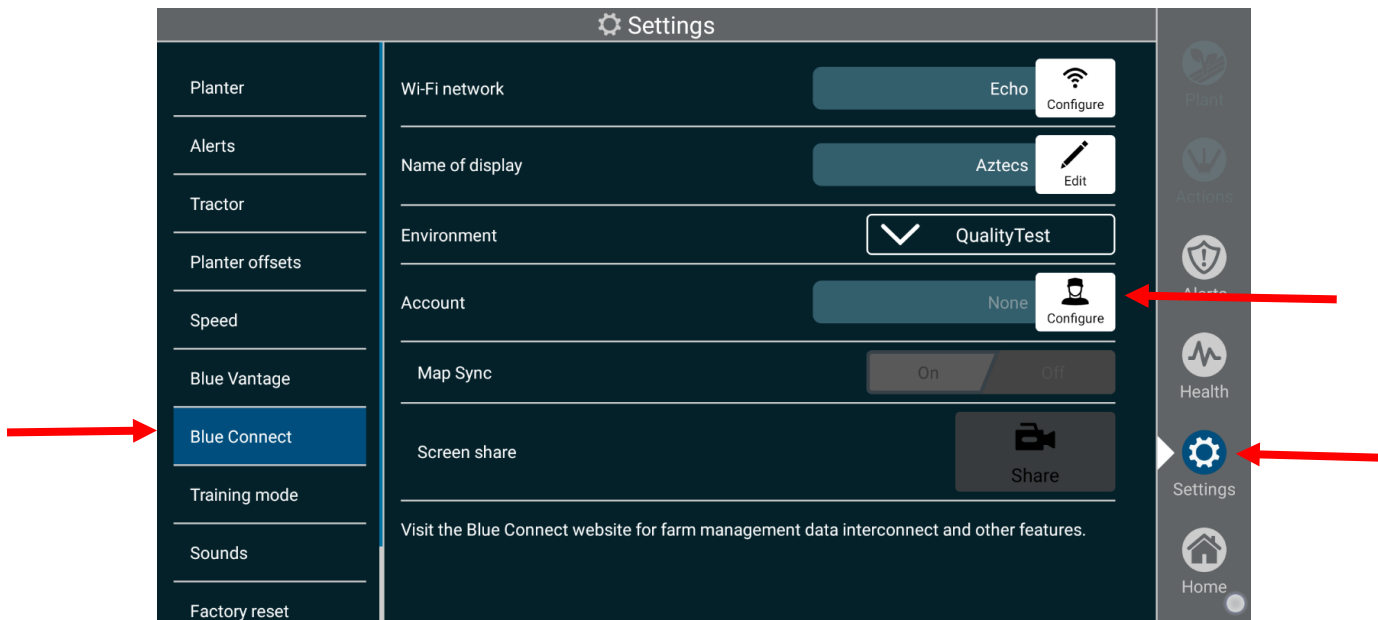

Data Transfer:

John Deere Operations Center Application Connection

- Send planting and application data from Blue Vantage displays through Blue Connect accounts to JDOC accounts utilizing Blue Vantage WIFI by simply logging into your JDOC account in Blue Connect
- Requires a Kinze Blue Connect account and a JDOC account
- Eliminates need for exporting Blue Vantage tasks to USB for import to FMIS
- Data is transferred at the top of every hour directly into your JDOC Account