

TRUE SPEED
(High Speed Seed Delivery)

OPERATOR MANUAL

M0323

Rev. 11/24

This page left blank intentionally.


OVERVIEW 3
Table of Contents3
To the Owner4
General Safety Rules6
Safety Messages7
Warranty8
Overview9

ROW UNIT OPERATION 11
Meter Settings11
Vacuum Settings Charts13
Split Row Vacuum Plug21
High Speed Seed Meter Cover Removal21
Canola/Rapeseed Meter Preparation23
Wheat/Barley Meter Preparation27
Wheat/Barley Planting Recommendations28
Additives30
Bayer Fluency Agent31

MAINTENANCE 32
Vacuum High Speed Seed Meter Maintenance 32
Vacuum High Speed Seed Meter Cleanout33
Delivery Tube Maintenance34
Maintenance Chart37
Preparation For Storage39

TROUBLESHOOTING 40
High Speed Seed Meter40
Seed Sensor Color Scheme42

It is the responsibility of the user to read and understand the Operator Manual in regards to safety, operation, lubrication and maintenance before operation of this equipment. It is the user's responsibility to inspect and service the machine routinely as directed in the Operator Manual. We have attempted to cover all areas of safety, operation, lubrication and maintenance; however, there may be times when special care must be taken to fit your conditions.

Throughout this manual the symbol  and the words **DANGER**, **WARNING**, and **CAUTION** are used to call attention to safety information that if not followed, will or could result in death or injury. **NOTICE** and **NOTE** are used to call your attention to important information. The definition of each of these terms follows:



Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components which, for functional purposes, cannot be guarded.



Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.


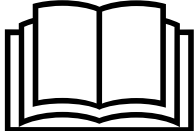


Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



Used to address safety practices not related to personal injury.

NOTE: Special point of information or machine adjustment instructions.

 WARNING	Improperly operating or working on this equipment could result in death or serious injury. Read and follow all instructions in Operator Manual before operating or working on this equipment.
	


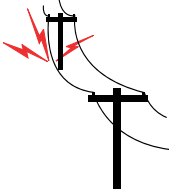
 WARNING	Some photos in this manual may show safety covers, shields, or lockup devices removed for visual clarity. NEVER OPERATOR OR WORK ON machine without all safety covers, shields, and lockup device in place as required.
--	--


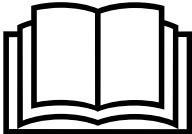
NOTE: Some photos in this manual may have been taken of prototype machines. Production machines may vary in appearance.



NOTE: Some photos and illustrations in this manual show optional attachments installed. Contact your Kinze Dealer for purchase of optional attachments.



1. Read and understand instructions provided in this manual and warning labels. Review these instructions frequently!
2. This machine is designed and built with your safety in mind. Do not make any alterations or changes to this machine. Any alteration to design or construction may create safety hazards.
3. A large portion of farm accidents happen from fatigue or carelessness. Safe and careful operation of tractor and planter will help prevent accidents.
4. Never allow planter to be operated by anyone unfamiliar with operation of all functions of the unit. Operators must read and thoroughly understand all instructions given in this manual before operating or working on equipment.
5. Be aware of bystanders, particularly children! Always look around to make sure it is safe to start tow vehicle engine or move planter. This is particularly important with higher noise levels and quiet cabs, as you may not hear people shouting.
6. Make sure planter weight does not exceed towing capacity of tractor, or bridge and road limits. This is critical to maintain safe control and prevent death or injury, or property and equipment damage.
7. Never ride or allow others to ride on planter.
8. Store planter in an area away from human activity. DO NOT permit children to play on or around the stored unit.
9. Keep hands, feet, and clothing away from moving parts. Do not wear loose-fitting clothing which may catch in moving parts.
10. Always wear protective clothing, shoes, gloves, hearing, and eye protection applicable for the situation.
11. Do not allow anyone to stand between tongue or hitch and towing vehicle when backing up to planter.
13. Prevent electrocution, other injuries, or property and equipment damage. Watch for obstructions such as wires, tree limbs, etc. when operating machine. Be aware of clearances during turns and when folding/unfolding planter.
14. Reinstall all guards removed for maintenance activities. Never leave guards off during operation.
15. Use of aftermarket hydraulic, electric, or PTO drives may create serious safety hazards to you and people nearby. If you install such drives, follow all appropriate safety standards and practices to protect you and others near this planter from injury.
16. Follow all federal, state/provincial, and local regulations when towing farm equipment on a public highway. Use safety chain (not an elastic or nylon/plastic tow strap) to retain connection between towing and towed machines in the event of primary attaching system separation.
17. Make sure all safety/warning lights, SMV sign, and reflective decals are in place and working properly before transporting the machine on public roads.
18. Limit towing speed to 15 MPH. Tow only with farm tractor of a minimum 90 HP. Allow for unit length when making turns.
19. Reduce speed prior to turns to avoid the risk of overturning. Always drive at a safe speed relative to local conditions and ensure your speed is slow enough for a safe emergency stop.
20. Chemical application is often an integral part of planting. Follow label instructions for proper chemical mixing, handling and container disposal methods.
21. Be familiar with safety procedures for immediate first aid should you accidentally contact chemical substances.
22. Use the proper protective clothing and safety equipment when handling chemicals.
23. Chemicals are supplied with Material Safety Data Sheets (MSDS) that provide full information about the chemical, its effects on exposure, and first aid needs in the event of an emergency. Keep your MSDS file up-to-date and available for first responders in case of emergency.
24. When servicing ground engaging components such as opening disks and firming points, use special care to avoid points and edges worn sharp during use.
25. Use professional help if you are unfamiliar with working on hydraulic systems. Pressurized hydraulic fluid can penetrate body tissue and result in death, serious infection, or other injuries.
26. Transporting planter with hoppers over half full or unevenly loaded can cause loss of control and could result in death, serious injury, or damage to property and equipment.

Following are some common hazard warnings associated with this equipment. Pay close attention to all safety, operating, and maintenance information in this manual and decals applied to your equipment.

 DANGER	Contacting or coming close to power lines or other high energy sources will cause death or serious injury.
	Keep away from power lines or high energy sources at all times.

 WARNING	Improperly operating or working on this equipment could result in death or serious injury. Read and follow all instructions in Operator Manual before operating or working on this equipment.
	

 WARNING	Falling equipment can cause death or serious injury. Install all lockup devices or lower planter to ground before working on equipment.
	

 WARNING	Explosive separation of rim and tire parts can cause death or serious injury. Overinflation, rim and tire servicing, improper use of rims and tires, or worn or improperly maintained tires could result in a tire explosion.
	

The Kinze Limited Warranty for your new machine is stated on the retail purchaser's copy of the Warranty And Delivery Receipt form. Additional copies of the Limited Warranty can be obtained through your Kinze Dealer.

Warranty, within the warranty period, is provided as part of Kinze's support program for registered Kinze products which have been operated and maintained as described in this manual. Evidence of equipment abuse or modification beyond original factory specifications will void the warranty. Normal maintenance, service and repair is not covered by Kinze warranty.

To register your Kinze product for warranty, a Warranty And Delivery Receipt form must be completed by the Kinze Dealer and signed by the retail purchaser, with copies to the Dealer, and to the retail purchaser. Registration must be completed and submitted to Kinze Manufacturing, Inc. within 5 business days of delivery of the Kinze product to the retail purchaser. Kinze Manufacturing, Inc. reserves the right to refuse warranty on serial numbered products which have not been properly registered.


If service or replacement of failed parts which are covered by the Limited Warranty are required, it is the user's responsibility to deliver the machine along with the retail purchaser's copy of the Warranty And Delivery Receipt to the Kinze Dealer for service. Kinze warranty does not include cost of travel time, mileage, hauling or labor. Any prior arrangement made between the Dealer and the retail purchaser in which the Dealer agrees to absorb all or part of this expense should be considered a courtesy to the retail purchaser.

Kinze warranty does not include cost of travel time, mileage, hauling, or labor.

Information in this manual was current at time of printing. However, due to Kinze's ongoing product improvement, production changes may cause your unit to appear slightly different in detail. Kinze Manufacturing, Inc. reserves the right to change specifications or design without notice and without incurring obligation to install the same on machines previously manufactured.

Right hand (R.H.) and left hand (L.H.), as used throughout this manual, are determined by facing the planter.

SAFETY SIGNS AND DECALS

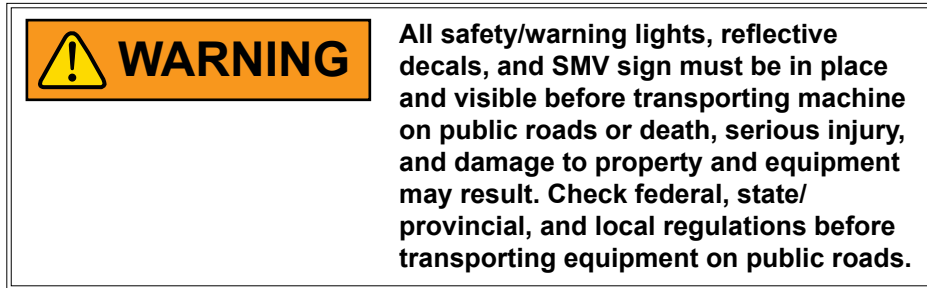

Safety signs and decals are placed on the machine to warn of hazards and provide important operating and maintenance instructions. Information on these signs are for your personal safety and the safety of those around you. FOLLOW ALL SAFETY INSTRUCTIONS!

- **Keep signs clean so they can be easily seen. Wash with soap and water or cleaning solution as required.**
- **Replace safety signs if damaged, painted over, or missing.**
- **Check reflective decals and SMV sign periodically. Replace if they show any loss of reflective properties.**
- **When replacing decals, clean machine surface thoroughly with soap and water or cleaning solution to remove all dirt and grease.**









NOTE: Safety sign and decal locations are shown in the Parts Manual for this machine.

NOTE: Style and locations of SMV sign, reflective decals, and safety/warning lights conform to ANSI/ASABE S279.14 JUL 2008 and ANSI/ASABE S276.6 JAN 2005.

Tools required

Hardware Size / Tool Required			
$1/4" = 7/16"$	$7/16" = 5/8"$ (nut for $7/16"$ hardware uses $11/16"$ tool)	$3/4" = 11/8"$	$1 1/4" = 1 7/8"$
$5/16" = 1/2"$	$1/2" = 3/4"$	$7/8" = 1 5/16"$	$1 1/2" = 2 1/4"$
$3/8" = 9/16"$	$5/8" = 15/16"$	$1" = 1 1/2"$	No. 6 = $1/4"$
No. 8 = $11/32"$			

METER SETTINGS

Crop - Seed Disc Part No. - ‡Seed Disc Kit	Ejector Wheel (color)	Baffle Setting	Seed Size Range	Population	Singulator Installed	Vacuum Setting Centimeters of Water	Lubricant
 Corn , 32 Cell (Light Blue) - P/N: G10347701 - Kit: 10892X	1 row 6 punches (Blue)	1	2508-5016 sds/kg	40k-107.5k sds/ha	Yes	*30 to 51 (See " Vacuum Settings Charts " on page 13)	Graphite† Talc‡ Bayer Fluency§ (If mandated)
 Soybean , 46 Cell (Black) - P/N: G10369101 - Kit: 10894X	1 row 8 punches (Black)	3	4840-8800 sds/kg	All 35cm rows up to 350k sds/ha	No	*38 to 63 (See " Vacuum Settings Charts " on page 13)	Graphite† Talc‡ Bayer Fluency§ (If mandated)
 Soybean , 92 Cell (Black) - P/N: G10369001 - Kit: 10893X	2 rows 8 punches (Black)	3-5	4840-8800 sds/kg	All 70cm rows above 350k sds/ha	No	*38 to 63 (See " Vacuum Settings Charts " on page 13)	Graphite† Talc‡ Bayer Fluency§ (If mandated)
 Cotton , 46 Cell (Green) - P/N: G10407701 - Kit: 10992X	1 row 8 punches (Green)	1	8800-14300 sds/kg	53.8k-201.5k sds/ha	Yes	20 to 46 (See " Vacuum Settings Charts " on page 13)	Graphite† Talc‡ Bayer Fluency§ (If mandated)
 Sugar Beets/ Milo , 46 Cell (Orange) - P/N: GB1303 - Kit: 10860X	1 row 8 punches (Orange)	1 Use P/N G10407001 (Orange Door)	Milo: 22k-39.6k sds/kg	53.8k-268.8k sds/ha	Yes	Milo: 30	Graphite† Talc‡ Bayer Fluency§ (If mandated)
			Sugarbeets: Pelletized			Sugarbeets: 38	
 Sunflower , 23 Cell (Yellow) - P/N: G10761701 - Kit: 11124X	1 row 8 punches (Yellow)	1	Oil # 2, 3, 4	32k-94k sds/ha	Yes	#2: 51 to 76	Graphite† Talc‡ Bayer Fluency§ (If mandated)
						#3: 38 to 63	
						#4: 25 to ??	
 Canola/Rapeseed , 104 Cell (Dark Gray) - P/N: G10771201 - Kit: 11340X	1 row 19 punches (Dark Gray)	1 Use P/N G10989501	18.7k-33k sds/kg	376.6k-874k sds/ha	Yes	15 to 38 (See " Vacuum Settings Charts " on page 13)	Graphite† Talc‡ Bayer Fluency§ (If mandated)
 Wheat/Barley , 210 Cell (Red) - P/N: G10958101 - Kit: 11551X	3 rows 14 punches (Red)	1-3	15k-30k sds/kg	1.2M-3.95M sds/ha	No	65	Graphite† Talc‡ Bayer Fluency§ (If mandated)

Install selected seed disc and ejector.

Continued on Next Page.

*Use low vacuum for small seeds/slow speed and high vacuum for big seeds/high speed.

†For more information on application rate, see Additives section.

‡Includes seed disc and ejector wheel.

§Bayer Fluency Agent is only required to be used in place of graphite or talc lubricants on vacuum equipped planters that are sowing neonicotinoid rated seeds in Canada. Refer to the Bayer Fluency Agent section for more information.

NOTE: See “Field Check Seed Population” on page --- for more information. Always field check seed population to ensure planting rates are correct.

NOTE: Baffle settings are marked from 1 – 5.

NOTE: Mixing seed sizes and shapes affects meter performance. Use consistent seed size and shape.

NOTE: Seed treatment, foreign material, dirt or seed chaff may cause gradual reduction of seed disc fill (population). See “Additives” pages for more information.

NOTE: Excessive seed treatment, humidity, and light-weight seed can affect meter performance. Use ½ cup of talc with each standard hopper fill of seed and mix thoroughly to coat all seeds and adjust rates as needed. Use of talc aids seed flow into meter, singulation and disc seed drop.



NOTE: Foreign material in seed disc orifices, such as seed chips, hulls, stems, etc., may affect seed delivery. Clean seed ensures accurate seed metering from vacuum seed meter. Remove Seed discs daily to check for buildup of foreign material in seed disc orifices.

See [“Vacuum High Speed Seed Meter Maintenance” on page 32](#) and [“Vacuum High Speed Seed Meter Cleanout” on page 33](#) in Lubrication and Maintenance section for more information.


VACUUM SETTINGS CHARTS

NOTE: Vacuum charts are a recommendation to help select the starting vacuum setting for a particular seed size and target planting speed. Due to variation in seed size, seed shape, and planting conditions, it is likely that additional adjustments in the vacuum setting may be necessary. Decrease vacuum from the listed setting if doubles or high population are displayed and increase vacuum if skips or low population are displayed.


Recommended Vac Chart for Corn Flat Seed Types

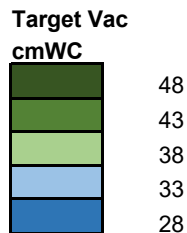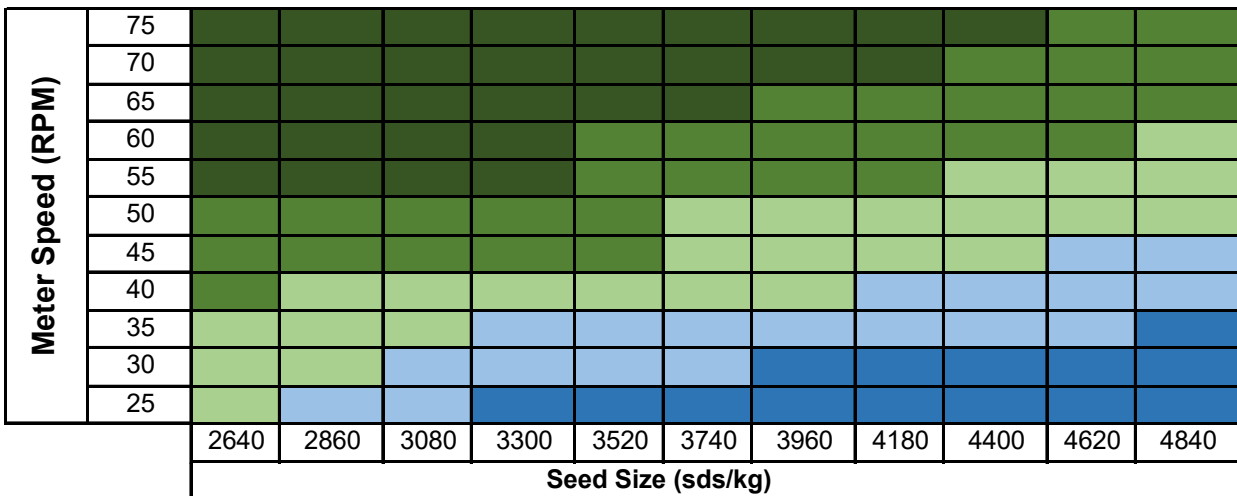


Recommended Vac Chart for Corn Round Seed Types

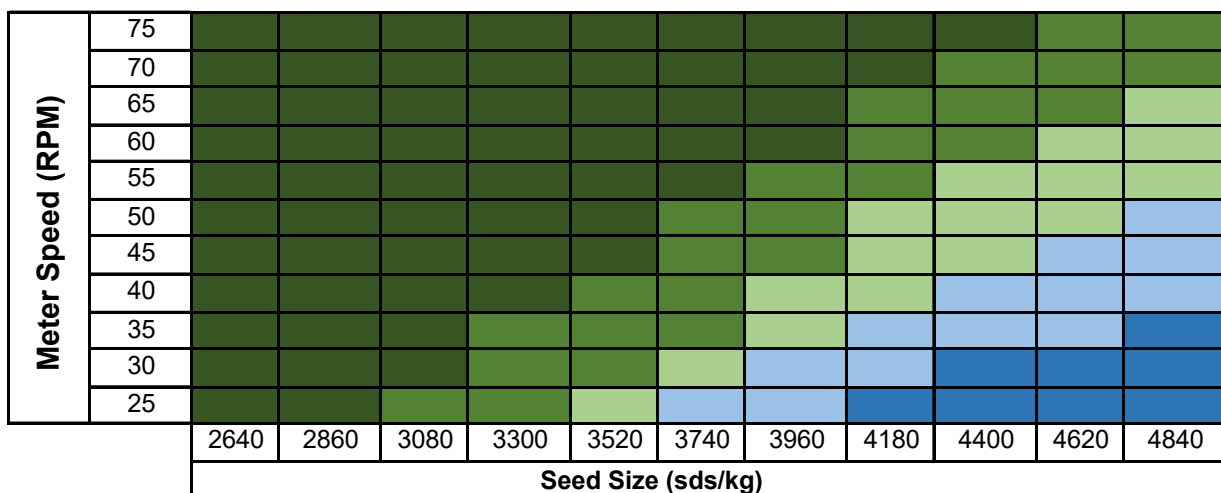


Recommended Vac Chart for Soybeans (Single Row and Dual Row)

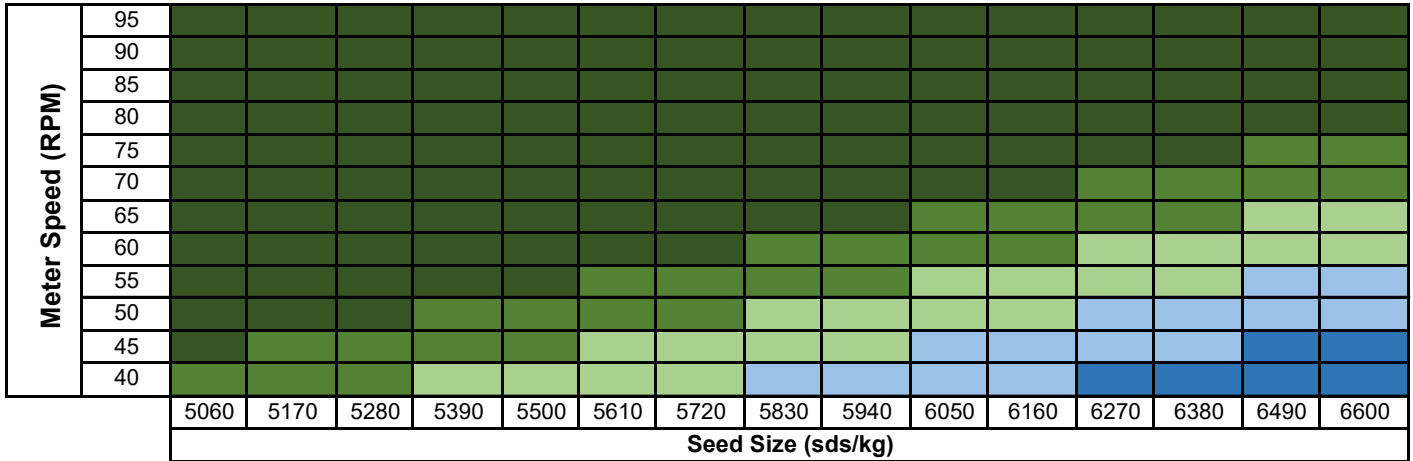


Target Vac
cmWC

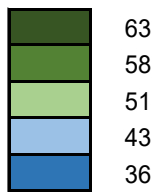


Recommended Vac Setting for Cotton

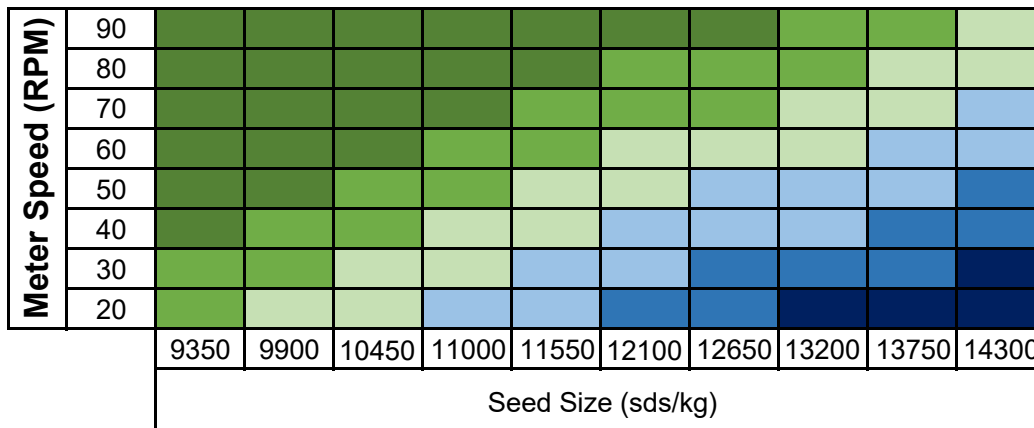


Target Vac
cmWC

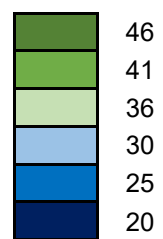


Recommended Vac Chart for Oil Sunflowers

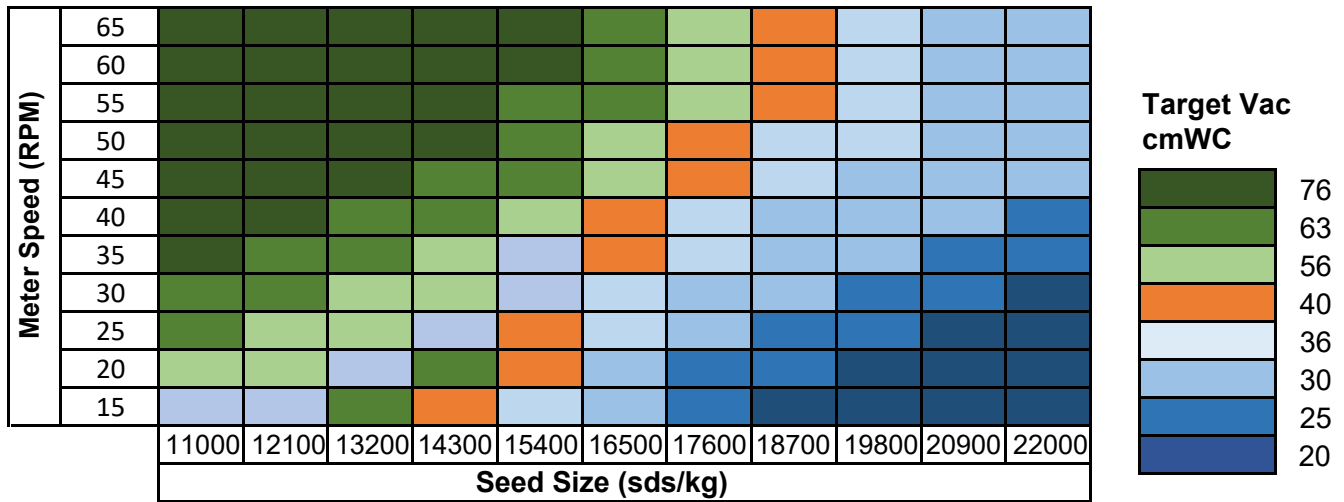

Recommended Vac Chart for Canola/Rapeseed

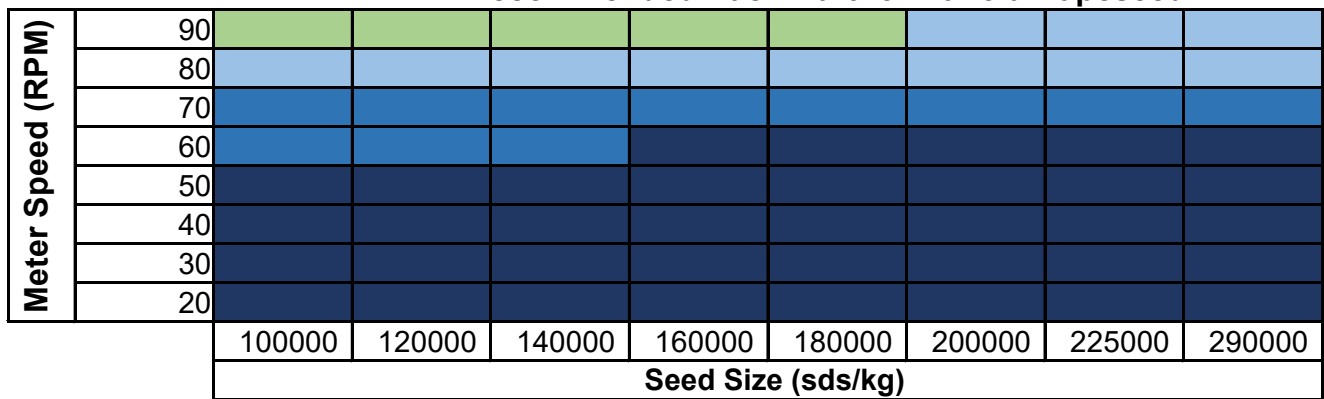

Target Vac cmWC

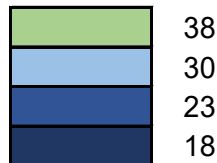

Meter Speed (70cm Row Spacing 32 Cell Disc - Corn)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	65000	7	9	12	14	17	19	21	24	26	28	31	33	36	38	40	43	45
	70000	8	10	13	15	18	20	23	26	28	31	33	36	38	41	43	46	48
	75000	8	11	14	16	19	22	25	27	30	33	36	38	41	44	46	49	52
	80000	9	12	15	18	20	23	26	29	32	35	38	41	44	47	50	53	55
	85000	9	12	15	19	22	25	28	31	34	37	40	43	46	50	53	56	59
	90000	10	13	16	20	23	26	30	33	36	39	43	46	49	53	56	59	62
	95000	10	14	17	21	24	28	31	35	38	42	45	48	52	55	59	62	66
	100000	11	15	18	22	26	29	33	36	40	44	47	51	55	58	62	66	69
	105000	11	15	19	23	27	31	34	38	42	46	50	54	57	61	65	69	73
	110000	12	16	20	24	28	32	36	40	44	48	52	56	60	64	68	72	76
	115000	13	17	21	25	29	34	38	42	46	50	55	59	63	67	71	75	80
	120000	13	18	22	26	31	35	39	44	48	53	57	61	66	70	74	79	83
	125000	14	18	23	27	32	36	41	46	50	55	59	64	68	73	77	82	87
	130000	14	19	24	28	33	38	43	47	52	57	62	66	71	76	81	85	90
	135000	15	20	25	30	34	39	44	49	54	59	64	69	74	79	84	89	94

Meter Speed (70cm Row Spacing 92 Cell Disc - Soybean)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	220000	8	11	14	17	20	22	25	28	31	33	36	39	42	45	47	50	53
	240000	9	12	15	18	21	24	27	30	33	37	40	43	46	49	52	55	58
	260000	10	13	16	20	23	26	30	33	36	40	43	46	49	53	56	59	63
	280000	11	14	18	21	25	28	32	36	39	43	46	50	53	57	60	64	67
	300000	11	15	19	23	27	30	34	38	42	46	49	53	57	61	65	68	72
	320000	12	16	20	24	28	32	37	41	45	49	53	57	61	65	69	73	77
	340000	13	17	22	26	30	34	39	43	47	52	56	60	65	69	73	78	82
	360000	14	18	23	27	32	37	41	46	50	55	59	64	68	73	78	82	87
	380000	14	19	24	29	34	39	43	48	53	58	63	67	72	77	82	87	92
	400000	15	20	25	30	36	41	46	51	56	61	66	71	76	81	86	91	96
	420000	16	21	27	32	37	43	48	53	59	64	69	75	80	85	91	96	101
	440000	17	22	28	33	39	45	50	56	61	67	73	78	84	89	95	100	106
	460000	18	23	29	35	41	47	53	58	64	70	76	82	88	93	99	105	111
	480000	18	24	30	37	43	49	55	61	67	73	79	85	91	97	103	110	116
	500000	19	25	32	38	44	51	57	63	70	76	82	89	95	101	108	114	120

	Optimal Zone
	Low or high meter speed, may require vacuum adjustment
	Exceeding maximum meter speed, expect performance degradation

Meter Speed (35cm Row Spacing 46 Cell Disc - Soybean, Cotton, Sugarbeet/Milo)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	50000	2	3	3	4	4	5	6	6	7	8	8	9	10	10	11	11	12
	65000	2	3	4	5	6	7	7	8	9	10	11	12	12	13	14	15	16
	80000	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
	95000	4	5	6	7	8	10	11	12	13	14	16	17	18	19	20	22	23
	110000	4	6	7	8	10	11	13	14	15	17	18	20	21	22	24	25	27
	125000	5	6	8	10	11	13	14	16	17	19	21	22	24	25	27	29	30
	140000	5	7	9	11	12	14	16	18	20	21	23	25	27	28	30	32	34
	155000	6	8	10	12	14	16	18	20	22	24	26	28	29	31	33	35	37
	170000	6	9	11	13	15	17	19	22	24	26	28	30	32	34	37	39	41
	185000	7	9	12	14	16	19	21	23	26	28	30	33	35	38	40	42	45
	200000	8	10	13	15	18	20	23	25	28	30	33	36	38	41	43	46	48
	215000	8	11	14	16	19	22	25	27	30	33	35	38	41	44	46	49	52
	230000	9	12	15	18	20	23	26	29	32	35	38	41	44	47	50	53	55
	245000	9	12	16	19	22	25	28	31	34	37	40	43	47	50	53	56	59
	260000	10	13	16	20	23	26	30	33	36	40	43	46	49	53	56	59	63
	275000	10	14	17	21	24	28	31	35	38	42	45	49	52	56	59	63	66
	290000	11	15	18	22	26	29	33	37	40	44	48	51	55	59	63	66	70
	305000	12	15	19	23	27	31	35	39	43	46	50	54	58	62	66	70	73
	320000	12	16	20	24	28	32	37	41	45	49	53	57	61	65	69	73	77
	335000	13	17	21	25	30	34	38	42	47	51	55	59	64	68	72	76	81
350000	13	18	22	27	31	36	40	44	49	53	58	62	67	71	75	80	84	
365000	14	19	23	28	32	37	42	46	51	56	60	65	69	74	79	83	88	
380000	14	19	24	29	34	39	43	48	53	58	63	67	72	77	82	87	92	
395000	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	
410000	16	21	26	31	36	42	47	52	57	62	68	73	78	83	88	94	99	
425000	16	22	27	32	38	43	49	54	59	65	70	75	81	86	92	97	102	
440000	17	22	28	33	39	45	50	56	61	67	73	78	84	89	95	100	106	
455000	17	23	29	35	40	46	52	58	63	69	75	81	87	92	98	104	110	
470000	18	24	30	36	42	48	54	60	66	72	77	83	89	95	101	107	113	
485000	18	25	31	37	43	49	55	62	68	74	80	86	92	98	105	111	117	

	Optimal Zone
	Low or high meter speed, may require vacuum adjustment
	Exceeding maximum meter speed, expect performance degradation

Meter Speed (70cm Row Spacing 46 Cell Disc - Soybean, Cotton, Sugarbeet/Milo)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	50000	4	5	6	8	9	10	11	13	14	15	16	18	19	20	22	23	24
	65000	5	7	8	10	12	13	15	16	18	20	21	23	25	26	28	30	31
	80000	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	37	39
	95000	7	10	12	14	17	19	22	24	27	29	31	34	36	39	41	43	46
	110000	8	11	14	17	20	22	25	28	31	33	36	39	42	45	47	50	53
	125000	10	13	16	19	22	25	29	32	35	38	41	44	48	51	54	57	60
	140000	11	14	18	21	25	28	32	36	39	43	46	50	53	57	60	64	67
	155000	12	16	20	24	28	31	35	39	43	47	51	55	59	63	67	71	75
	170000	13	17	22	26	30	34	39	43	47	52	56	60	65	69	73	78	82
	185000	14	19	23	28	33	38	42	47	52	56	61	66	70	75	80	84	89
	200000	15	20	25	30	36	41	46	51	56	61	66	71	76	81	86	91	96
	215000	16	22	27	33	38	44	49	55	60	65	71	76	82	87	93	98	104
	230000	18	23	29	35	41	47	53	58	64	70	76	82	88	93	99	105	111
	245000	19	25	31	37	43	50	56	62	68	75	81	87	93	99	106	112	118
	260000	20	26	33	40	46	53	59	66	73	79	86	92	99	106	112	119	120
	275000	21	28	35	42	49	56	63	70	77	84	91	98	105	112	119	120	120
	290000	22	29	37	44	51	59	66	74	81	88	96	103	110	118	120	120	120
	305000	23	31	39	46	54	62	70	77	85	93	101	108	116	120	120	120	120
	320000	24	32	41	49	57	65	73	81	89	97	106	114	120	120	120	120	120
	335000	25	34	42	51	59	68	76	85	93	102	110	119	120	120	120	120	120
350000	27	36	44	53	62	71	80	89	98	107	115	120	120	120	120	120	120	
365000	28	37	46	56	65	74	83	93	102	111	120	120	120	120	120	120	120	
380000	29	39	48	58	67	77	87	96	106	116	120	120	120	120	120	120	120	
395000	30	40	50	60	70	80	90	100	110	120	120	120	120	120	120	120	120	
410000	31	42	52	62	73	83	94	104	114	120	120	120	120	120	120	120	120	
425000	32	43	54	65	75	86	97	108	119	120	120	120	120	120	120	120	120	
440000	33	45	56	67	78	89	100	112	120	120	120	120	120	120	120	120	120	
455000	35	46	58	69	81	92	104	115	120	120	120	120	120	120	120	120	120	
470000	36	48	60	72	83	95	107	119	120	120	120	120	120	120	120	120	120	
485000	37	49	62	74	86	98	111	120	120	120	120	120	120	120	120	120	120	

	Optimal Zone
	Low or high meter speed, may require vacuum adjustment
	Exceeding maximum meter speed, expect performance degradation

Meter Speed (70cm Row Spacing 23 Cell Disc - Sunflower)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	40000	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	37	39
	45000	7	9	11	14	16	18	21	23	25	27	30	32	34	37	39	41	43
	50000	8	10	13	15	18	20	23	25	28	30	33	36	38	41	43	46	48
	55000	8	11	14	17	20	22	25	28	31	33	36	39	42	45	47	50	53
	60000	9	12	15	18	21	24	27	30	33	37	40	43	46	49	52	55	58
	65000	10	13	16	20	23	26	30	33	36	40	43	46	49	53	56	59	63
	70000	11	14	18	21	25	28	32	36	39	43	46	50	53	57	60	64	67
	75000	11	15	19	23	27	30	34	38	42	46	49	53	57	61	65	68	72
	80000	12	16	20	24	28	32	37	41	45	49	53	57	61	65	69	73	77
	85000	13	17	22	26	30	34	39	43	47	52	56	60	65	69	73	78	82
	90000	14	18	23	27	32	37	41	46	50	55	59	64	68	73	78	82	87
	95000	14	19	24	29	34	39	43	48	53	58	63	67	72	77	82	87	92
100000	15	20	25	30	36	41	46	51	56	61	66	71	76	81	86	91	96	

Meter Speed (70cm Row Spacing 104 Cell Disc - Canola/Rapeseed)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	350000	6	8	10	12	14	16	18	20	22	24	26	27	29	31	33	35	37
	400000	7	9	11	13	16	18	20	22	25	27	29	31	34	36	38	40	43
	450000	8	10	13	15	18	20	23	25	28	30	33	35	38	40	43	45	48
	500000	8	11	14	17	20	22	25	28	31	34	36	39	42	45	48	50	53
	550000	9	12	15	19	22	25	28	31	34	37	40	43	46	49	52	56	59
	600000	10	13	17	20	24	27	30	34	37	40	44	47	50	54	57	61	64
	650000	11	15	18	22	26	29	33	36	40	44	47	51	55	58	62	66	69
	700000	12	16	20	24	27	31	35	39	43	47	51	55	59	63	67	71	75
	750000	13	17	21	25	29	34	38	42	46	50	55	59	63	67	72	76	80
	800000	13	18	22	27	31	36	40	45	49	54	58	63	67	72	76	81	85
	850000	14	19	24	29	33	38	43	48	52	57	62	67	72	76	81	86	91

	Optimal Zone
	Low or high meter speed, may require vacuum adjustment
	Exceeding maximum meter speed, expect performance degradation


Meter Speed (35cm Row Spacing 210 Cell Disc - Wheat/Barley)

		Ground Speed (km/h)																
		3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
Target Population (sds/ha)	1200000	10	13	17	20	23	27	30	33	37	40	43	47	50	53	57	60	63
	1400000	12	16	19	23	27	31	35	39	43	47	51	54	58	62	66	70	74
	1600000	13	18	22	27	31	36	40	44	49	53	58	62	67	71	76	80	84
	1800000	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95
	2000000	17	22	28	33	39	44	50	56	61	67	72	78	83	89	94	100	106
	2200000	18	24	31	37	43	49	55	61	67	73	79	86	92	98	104	110	116
	2400000	20	27	33	40	47	53	60	67	73	80	87	93	100	107	113	120	120
	2600000	22	29	36	43	51	58	65	72	79	87	94	101	108	116	120	120	120
	2800000	23	31	39	47	54	62	70	78	86	93	101	109	117	120	120	120	120
	3000000	25	33	42	50	58	67	75	83	92	100	108	117	120	120	120	120	120
	3200000	27	36	44	53	62	71	80	89	98	107	116	120	120	120	120	120	120
	3400000	28	38	47	57	66	76	85	94	104	113	120	120	120	120	120	120	120
	3600000	30	40	50	60	70	80	90	100	110	120	120	120	120	120	120	120	120
	3800000	32	42	53	63	74	84	95	106	116	120	120	120	120	120	120	120	120
	4000000	33	44	56	67	78	89	100	111	120	120	120	120	120	120	120	120	120

	Optimal Zone
	Low or high meter speed, may require vacuum adjustment
	Exceeding maximum meter speed, expect performance degradation

SPLIT ROW VACUUM PLUG

Remove vacuum plug from port opening while planting with split rows. When split rows are not in use plug port with vacuum plug. Plugging port while not in use reduces vacuum load.

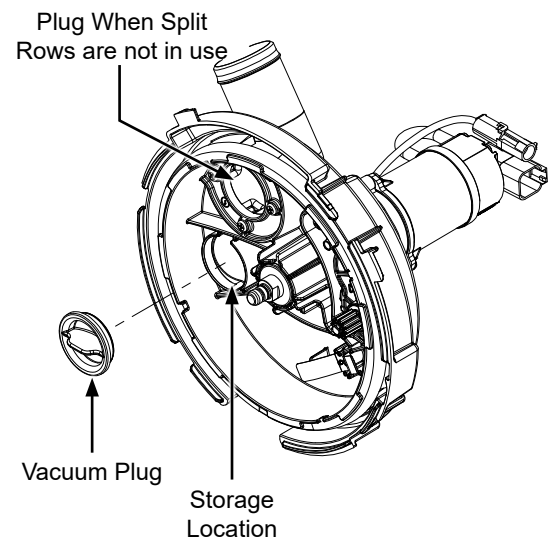


HIGH SPEED SEED METER COVER REMOVAL

1. Push latch and rotate cover clockwise.



2. Select seed disc and ejector to match crop and population.

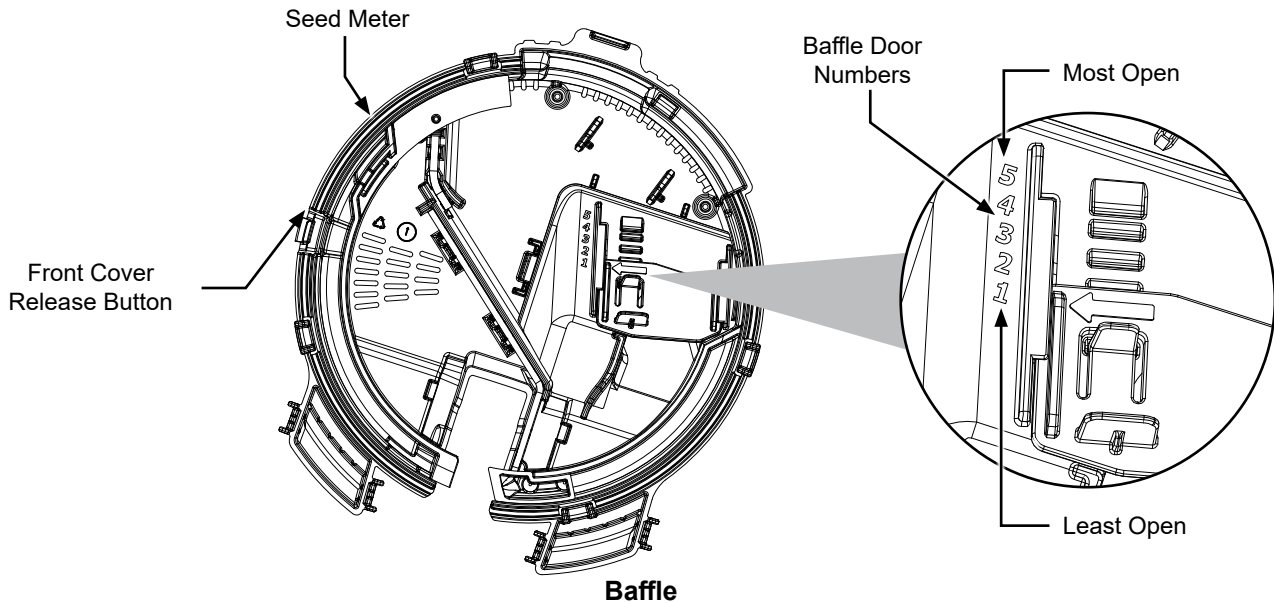


NOTE: Damaged seed or seed containing foreign material will cause plugging of seed disc orifices and require more frequent seed meter cleanout to prevent underplanting.

Wheel-Type Ejectors

Wheel-type ejectors expel seed and remnants from seed disc cells. These ejectors are disc specific, color -coded to match their corresponding disc, and necessary for proper meter performance.

NOTE: Seed size, seed shape, seed treatments, travel speed, and planting rate affect meter performance.

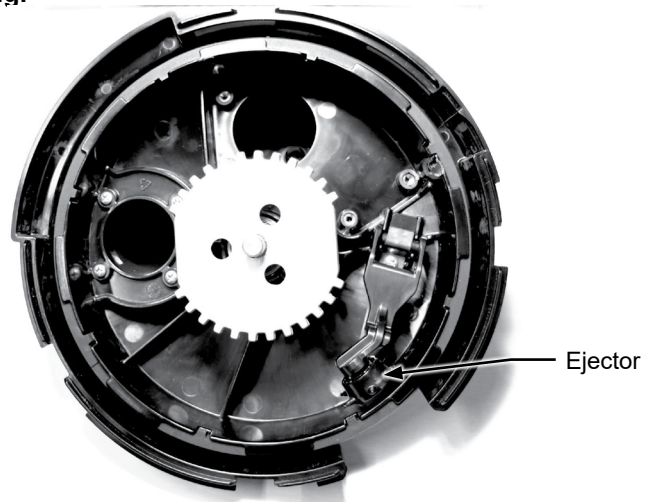

3. Adjust baffle door to recommended setting.
4. Install cover and rotate counter-clockwise.
5. With vacuum fan running, use priming sequence on Blue Vantage display to load seed onto seed discs.


NOTE: Vacuum reading will be much lower when seed disc cells are empty. Prime seed meters and allow vacuum to stabilize before starting to plant.

CANOLA/RAPESEED METER PREPARATION

This section will guide you through the process of installing a baffle door (P/N G10989501), a diffuser seal (P/N G10947901), and a meter wall brush (P/N G10990801) into a True Speed meter when used with a canola/rapeseed disc.

Note: The combination of these parts is intended to be used only with the canola/rapeseed disc.

Step 1. Install the baffle door in the meter baffle.

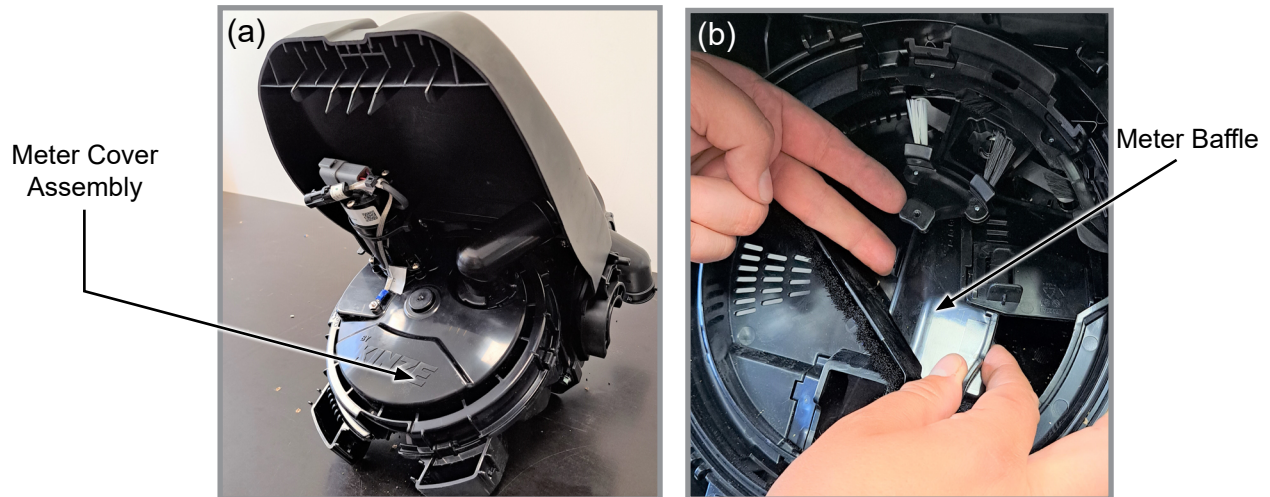

- Remove the meter cover assembly by turning it clockwise and set it aside.
- Remove the meter baffle from the meter housing assembly by pressing the clip on the side of the meter baffle.





- Snap the baffle door up as shown above and slide it out of the meter baffle.
- Install the provided baffle door in the meter baffle by sliding it up from the bottom until the arrow on the baffle door aligns with number 1 on the meter baffle.


NOTE: Do not place the meter baffle back into the meter housing assembly yet.

Step 2. Install the meter wall brush.



Lower Seed Relief

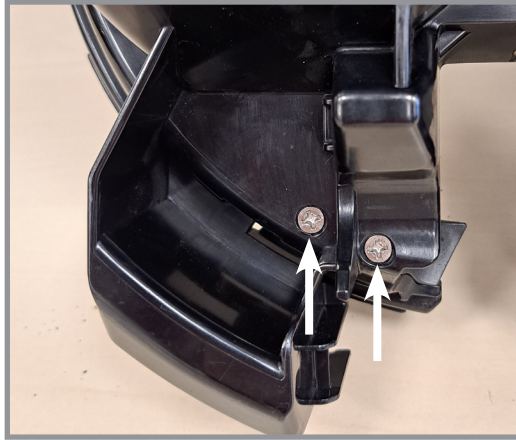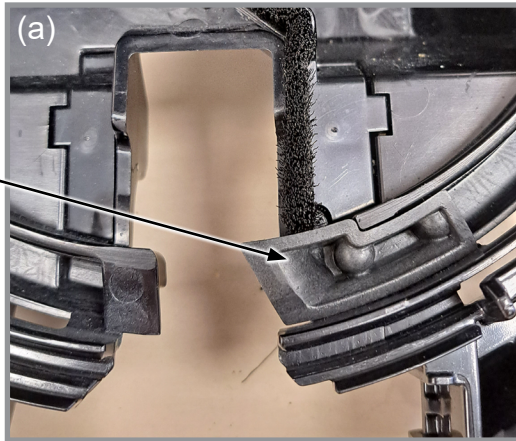


- a. Take out the lower seed relief located at the bottom of the meter housing by removing the two screws (shown by the arrows) on the other side of the meter housing.

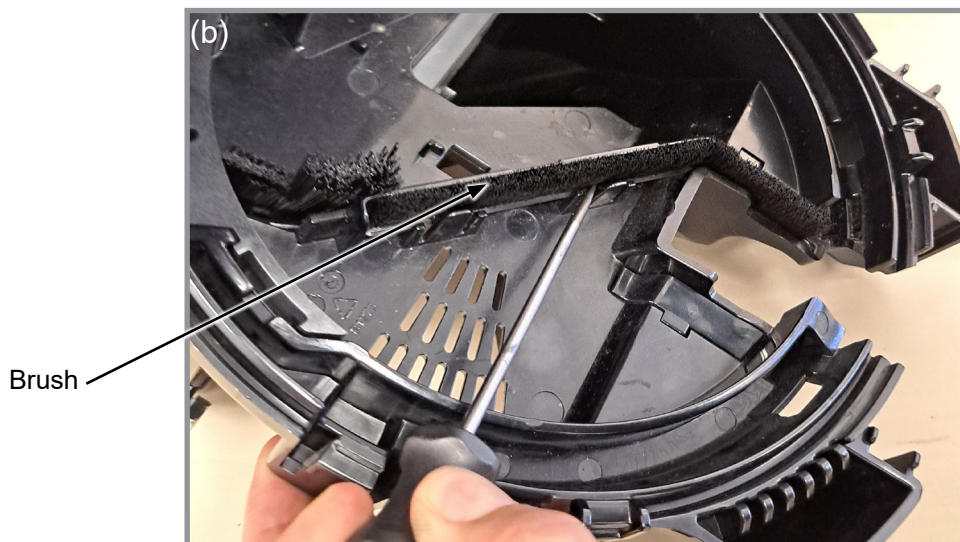

- b. Using a flathead screwdriver, press the lower clip from the inside, as demonstrated above, and extract the brush from the meter housing.

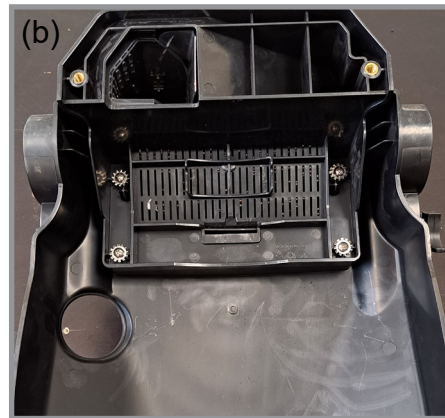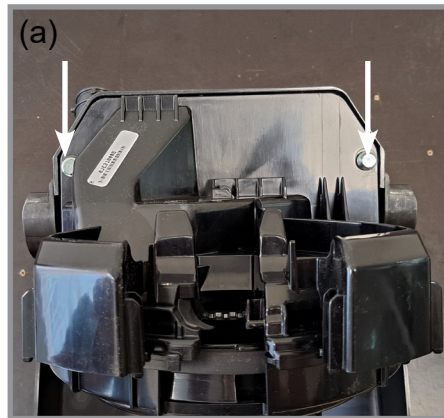
Step 3. Install the diffuser seal.

- a. Turn the mini hopper assembly with the attached meter assembly over and remove the two screws (indicated by the arrows) at the top of the meter assembly.
- b. Remove the meter assembly and put it aside.

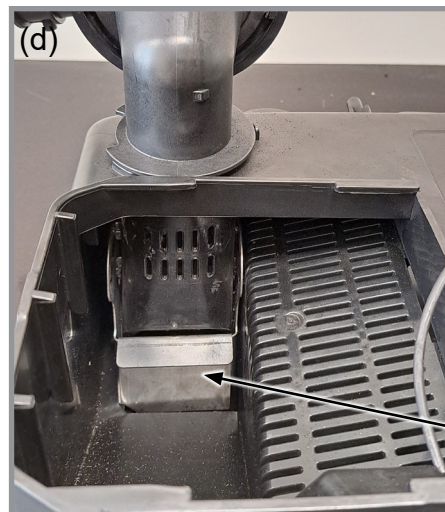

Diffuser Door

- c. Return the mini hopper assembly to its initial position and remove the lid by sliding it down.
- d. Make sure that the diffuser door is fully pushed down.

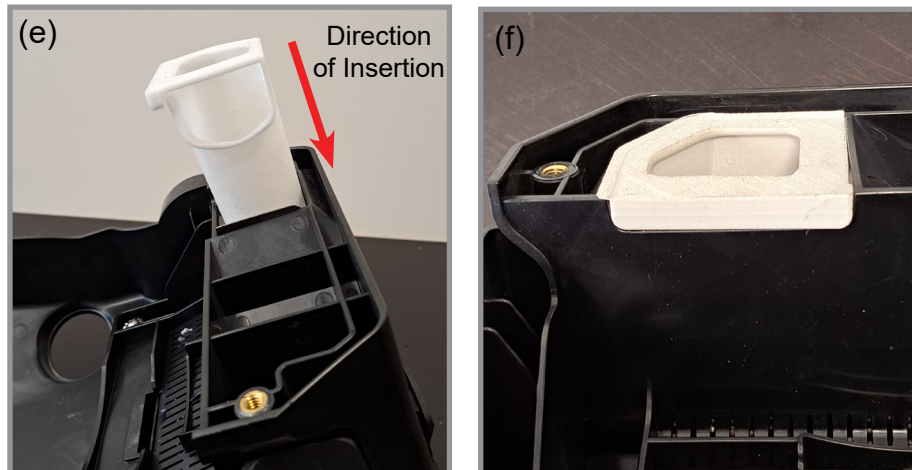

- e. Turn the mini hopper over again and insert the diffuser seal as provided above.
- f. Ensure that the diffuser seal is fully inserted into the hole and flush with the top of the mini hopper. Check that the diffuser door is still down.



- g. Reattach the meter assembly by installing the screws back in.


Note: After finishing seeding rapeseed, remove the parts intended for use with the rapeseed disc (except for the meter wall brush; it can be used with any other seed discs). Return the meter to its initial stage by installing any removed parts according to their original positions.

WHEAT/BARLEY METER PREPARATION


IMPORTANT: WHEN PLANTING WHEAT, IT MAY RESULT IN INCREASED WEAR ON CERTAIN COMPONENTS, SUCH AS THE BRUSH, COMB, EJECTOR, AND OTHERS. AS A RESULT, THESE PARTS MAY HAVE A SHORTER LIFESPAN AND WILL LIKELY REQUIRE MORE FREQUENT REPLACEMENTS.

Step 1. Check and prepare the meter.

- a. Before planting with the Wheat/Barley disc, make sure to remove the singulator.

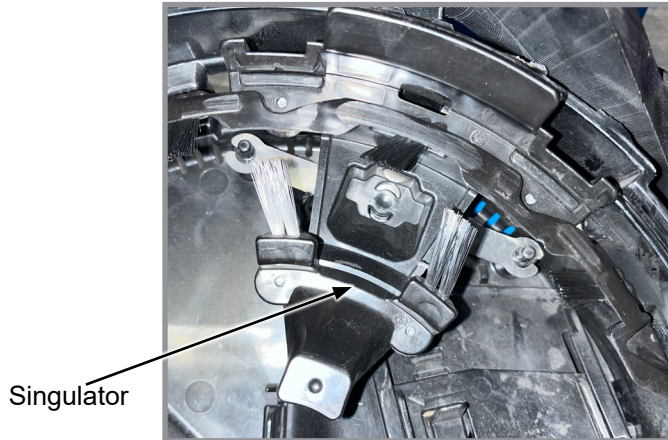

Singulator installed

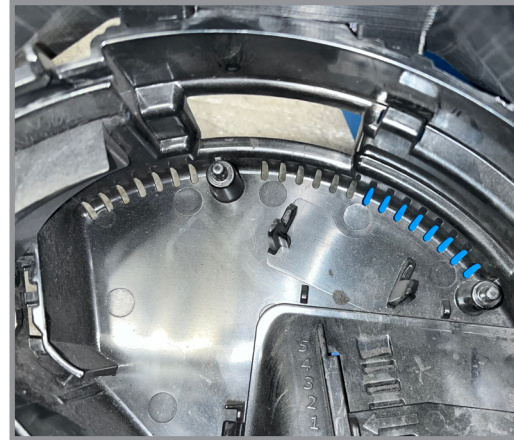

Singulator removed

- b. Set the baffle door position according to your seed size, population, and speed. Refer to the table shown on page 29.




Baffle Door Position 1




Baffle Door Position 3

- c. Inspect the ejector wheel for any signs of wear or damage. Do not use an ejector wheel with damaged pins (see pictures below). The ejector wheel is considered worn out or damaged when the pins are worn down by 50% or are broken.

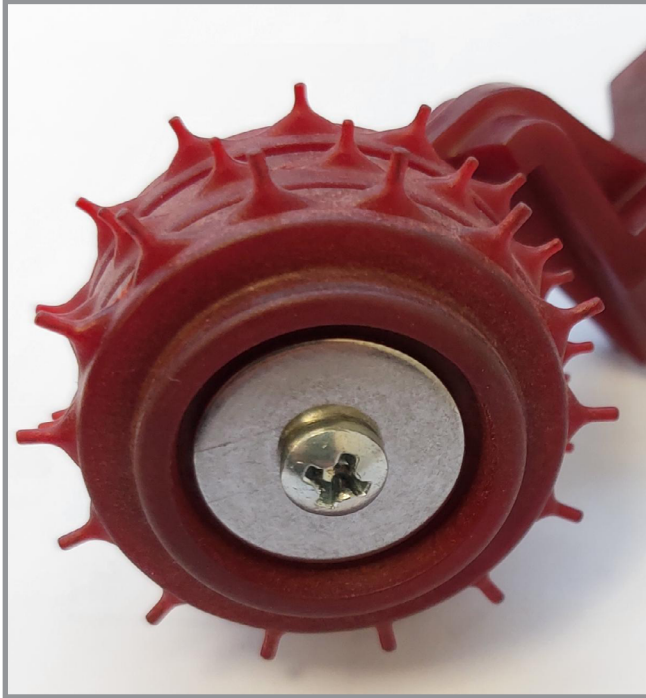

Ejector with intact pins

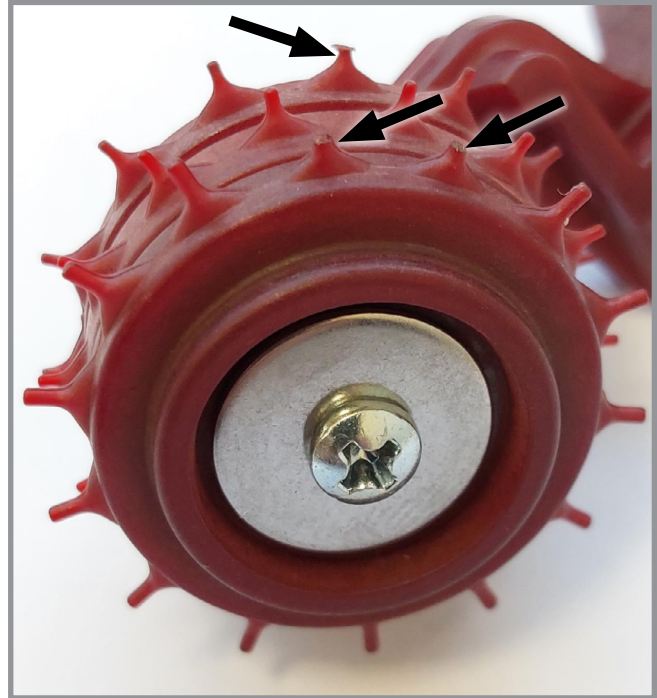

Ejector with damaged pins, indicated by arrows

- d. Install the ejector wheel and the seed disc properly.
 e. After installing the ejector wheel and the disc, rotate the disc by hand to ensure that the ejector wheel rotates freely and without any excessive noise. The ejector wheel pins should move smoothly in and out of the seed disc.

Step 2. Prepare the seeds.

- a. Evenly cover the seeds with graphite, using approximately 100 grams of graphite per 100 kilograms of seed.

WHEAT/BARLEY PLANTING RECOMMENDATIONS

Step 1. Adjust the vacuum settings.

- a. Adjust the vacuum level based on seed size, population, and speed. For the initial position of the baffle door and vacuum level, refer to the table on page 29. Note that these are starting points, and the actual values will depend on the specific seed and other variables.
 b. After setting the vacuum level, allow it to stabilize for 15 seconds.

IMPORTANT: THE SYSTEM IS HIGHLY SENSITIVE TO THE VACUUM LEVEL. AN UNEVEN OR UNSTABLE VACUUM CAN LEAD TO INCONSISTENT ROW-TO-ROW PERFORMANCE. IT IS RECOMMENDED TO SET A SLIGHTLY HIGHER VACUUM LEVEL, WHICH WILL INCREASE THE SEED POPULATION BY ABOUT 10% ABOVE THE DESIRED AMOUNT. FOR EXAMPLE, IF YOU AIM TO PLANT 1,000,000 SEEDS, SET THE MONITOR POPULATION TO 900,000 AND INCREASE THE VACUUM SO THAT THE MONITOR READS APPROXIMATELY 1,000,000 SEEDS. THIS WILL IMPROVE ROW-TO-ROW PERFORMANCE.

Recommended Vacuum Settings Table for Wheat/Barley, 35cm Row Width

LIGHT SEEDS (28000-33000 KERNELS/kg), 35cm Row Width												
	1.2M/ha	BAFFLE POSITION	1.8M/ha	BAFFLE POSITION	2.2M/ha	BAFFLE POSITION	3M/ha	BAFFLE POSITION	3.5M/ha	BAFFLE POSITION	3.95M/ha	BAFFLE POSITION
5 km/h	10 cmwc	1	13 cmwc	1	17 cmwc	1	22 cmwc	1	25 cmwc	1	32 cmwc	1
8 km/h	16 cmwc	1	20 cmwc	1	22 cmwc	1	26 cmwc	1	35 cmwc	1	42 cmwc	1
13 km/h	21 cmwc	1	26 cmwc	1	35 cmwc	1	42 cmwc	1	48 cmwc	1	N/A	N/A
16 km/h	35 cmwc	1	42 cmwc	1	52 cmwc	1	N/A	N/A	N/A	N/A	N/A	N/A
19 km/h	46 cmwc	1	52 cmwc	1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
MEDIUM SEEDS (21000-27000 KERNELS/kg), 35cm Row Width												
	1.2M/ha	BAFFLE POSITION	1.8M/ha	BAFFLE POSITION	2.2M/ha	BAFFLE POSITION	3M/ha	BAFFLE POSITION	3.5M/ha	BAFFLE POSITION	3.95M/ha	BAFFLE POSITION
5 km/h	14 cmwc	1	17 cmwc	1	20 cmwc	1	22 cmwc	1	25 cmwc	1	32 cmwc	1
8 km/h	19 cmwc	1	22 cmwc	1	27 cmwc	1	32 cmwc	1	40 cmwc	1	47 cmwc	1
13 km/h	24 cmwc	1	32 cmwc	1	40 cmwc	1	47 cmwc	1	55 cmwc	1	N/A	N/A
16 km/h	40 cmwc	1	47 cmwc	1	55 cmwc	1	N/A	N/A	N/A	N/A	N/A	N/A
19 km/h	47 cmwc	1	55 cmwc	1	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
HEAVY SEEDS (<20000 KERNELS/kg), 35cm Row Width												
	1.2M/ha	BAFFLE POSITION	1.8M/ha	BAFFLE POSITION	2.2M/ha	BAFFLE POSITION	3M/ha	BAFFLE POSITION	3.5M/ha	BAFFLE POSITION	3.95M/ha	BAFFLE POSITION
5 km/h	20 cmwc	1	22 cmwc	1	25 cmwc	1	28 cmwc	1	32 cmwc	1	40 cmwc	3
8 km/h	25 cmwc	1	27 cmwc	1	33 cmwc	1	37 cmwc	1	48 cmwc	1	53 cmwc	3
13 km/h	30 cmwc	1	35 cmwc	1	40 cmwc	1	48 cmwc	3	53 cmwc	3	N/A	N/A
16 km/h	47 cmwc	1	53 cmwc	1	60 cmwc	3	N/A	N/A	N/A	N/A	N/A	N/A
19 km/h	53 cmwc	3	60 cmwc	3	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

ADDITIVES

Lubricant Application Rate	
Graphite	
Bulk Fill Hoppers	0.45 kg Bottle/50 Unit Fill
80/20 Talc-Graphite	
Bulk Fill Hoppers	1.81 kg/50 Unit Fill**
**Must be evenly mixed during fill.	
Talc	
Bulk Fill Hoppers	1.81 kg/50 Unit Fill*
*Double amount of talc for sunflowers.	

GRAPHITE

The use of graphite is the primary recommendation to promote seed flow, provide lubrication for the seed meter and to help dissipate static charge buildup. Among the available dry seed lubricants graphite is the most effective and easiest to use and it requires no mechanical agitation.

Bulk Fill Hoppers

Mix 0.45 bottle of powdered graphite each time the bulk seed hopper is filled. Graphite should be added in layers as the bulk seed hoppers are filled. Regular graphite use prolongs life of the seed meter components, improves seed spacing, and may reduce buildup of seed treatments.



Adding graphite bulk fill hopper

NOTE: Additional graphite may be required to retard buildup of seed treatments on meter components. More frequent cleaning of seed sensors may be necessary due to use of additional graphite.

80/20 TALC-GRAPHITE

Talc-graphite lubricant is to be used for treated seed, providing benefits of both talc and graphite. It absorbs moisture to prevent bridging, minimize static electricity for improved seed flow, and lubricates seed and meters.

Bulk Fill Hoppers

Mix 1.81 kg of 80/20 talc-graphite each time the bulk seed hopper is filled. Regular graphite use prolongs life of the seed meter components, improves seed spacing, and may reduce buildup of seed treatments.

NOTE: Talc-Graphite lubricant MUST be mixed evenly during fill.

TALC

Talc seed lubricant may be used as a drying agent in addition to graphite lubrication. The drying agent may improve seed release and/or **retard buildup of seed treatments on meter components.**

1. Fill hopper ½ full of seed, add 0.9 kg of talc and **mix thoroughly.**
2. Finish filling hopper, and add another 0.9 kg of talc and **mix thoroughly.**
3. Adjust rate of talc use as needed so all seeds are coated, while avoiding a buildup of talc in bottom of hopper.

Humid conditions and/or small sized seeds with extra seed treatment may require additional talc to maintain meter performance.

NOTE: Liquid seed treatments or inoculants may create buildup on the seed disc or brushes. Check frequently for proper population and/or seed delivery when using any liquid seed treatment.

Completely mix all treatments with seed following manufacturer's recommendations. Seed treatment dumped on top of seed after hopper is filled may not mix properly and cause seed bridging, reducing population or stopping meter from planting.



BAYER FLUENCY AGENT

Bayer Fluency Agent is an alternate seed lubricant by Bayer Crop Science. The intent of this product is to replace graphite and talc lubricants and to lower the amount of dust emissions from planter vacuum fans.

This product, as tested by Kinze, is compatible with Kinze's bulk fill system and vacuum meters. Due to limited testing, wear life characteristics of meters and bulk fill systems that use Bayer Fluency Agent are not yet known. Please follow Bayer Fluency Agent instructions for rates and mixing directions.

NOTE: Presently, Bayer Fluency Agent is only required to be used in Canada with Bulk Fill or Vacuum planters that plant corn or beans treated with neonicotinoids. Farms outside of Canada, farms not using seed treated with neonicotinoids, and farms not using pneumatic metering devices do not need to use Bayer Fluency Agent. All planters not equipped with vacuums or fans are exempt from using Bayer Fluency Agent.

VACUUM HIGH SPEED SEED METER MAINTENANCE

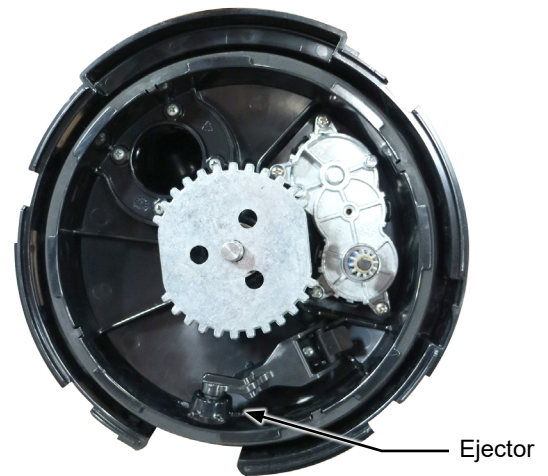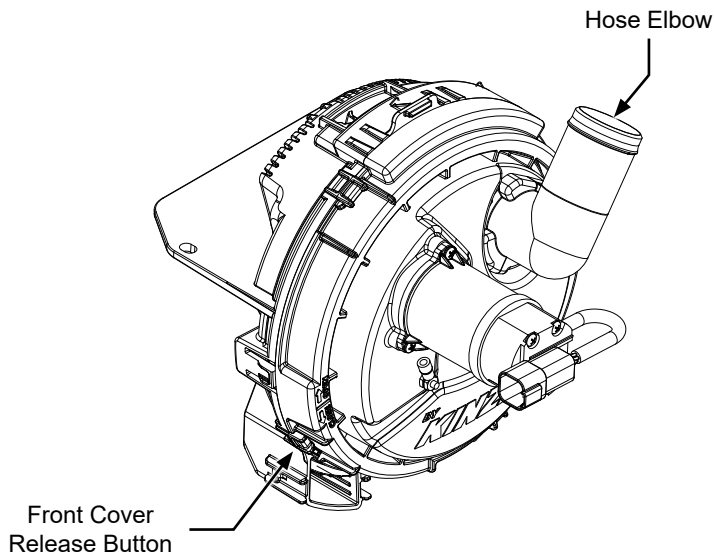


Seed Meter With Back Cover Removed

Before each planting season inspect seed discs and Singulator and clean or replace as needed.

Use clean, high quality seed for maximum meter accuracy. Damaged or cracked seed, hulls, and foreign material may become lodged in seed disc orifices and greatly reduce meter accuracy.

Inspect and clean seed discs daily checking for any buildup of foreign material and blocked orifices. If seed disc orifices are plugged frequently with seed remnants, ejector wheel may need to be replaced. Clean seed disc by washing it with soap and water. Dry thoroughly.

Inspect singulator for wear after every 60 hectares per row of operation. If singulation is low or inspection marks are not visible, replace singulator. Also inspect singulator brushes, if brushes are worn/frayed replace singulator. Replace singulator by 200 individual row hectares.

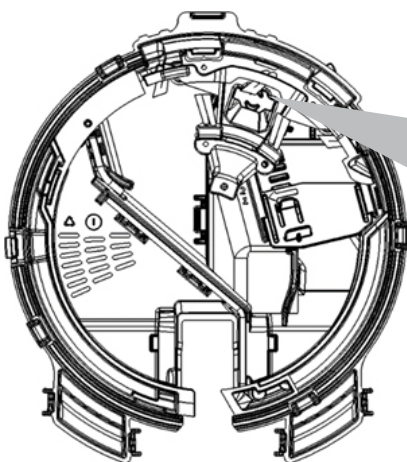

See [“Vacuum High Speed Seed Meter Cleanout” on page 33](#) for additional Vacuum Seed Metering System maintenance.

VACUUM HIGH SPEED SEED METER CLEANOUT


NOTE: Use of damaged seed or seed containing foreign material will cause plugging of seed cell orifices and require more frequent seed meter cleanout to prevent underplanting.

Thorough seed meter cleanout is important to maintain genetic purity.

1. Remove bulk fill and vacuum hose fittings from meter.
2. Rotate meter into service position.
3. Unplug electrical connections and ground straps.
4. Push release button and rotate seed meter vacuum cover clockwise to align locking tabs with slots.
5. Lift meter cover off meter assembly.
5. Remove mini-hopper and dump seed into a container.
6. Inspect mini-hopper door for any remaining seed.
7. If changing crop type, change seed disc, ejector, remove or install singulator, and adjust baffle setting.
8. Reassemble meter and latch into row unit.


NOTE: See [“Preparation For Storage” on page 39](#) to prepare seed meters and seed delivery tubes for storage.

DELIVERY TUBE MAINTENANCE

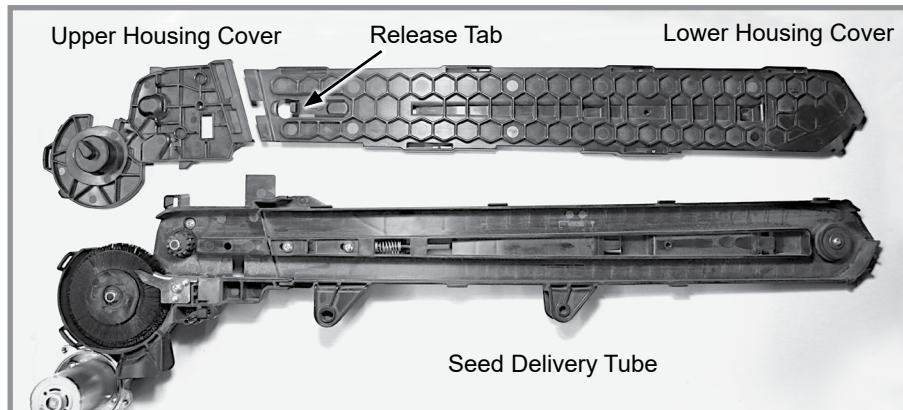

Delivery Tube Disassembly

1. Unplug electrical connections and remove delivery tube from row unit.
2. Unscrew and remove seed sensor from delivery tube.
3. Lift release tab and slide lower housing cover downward. Lift and remove.
4. Lightly lift under the cover and slide down release the upper housing cover.

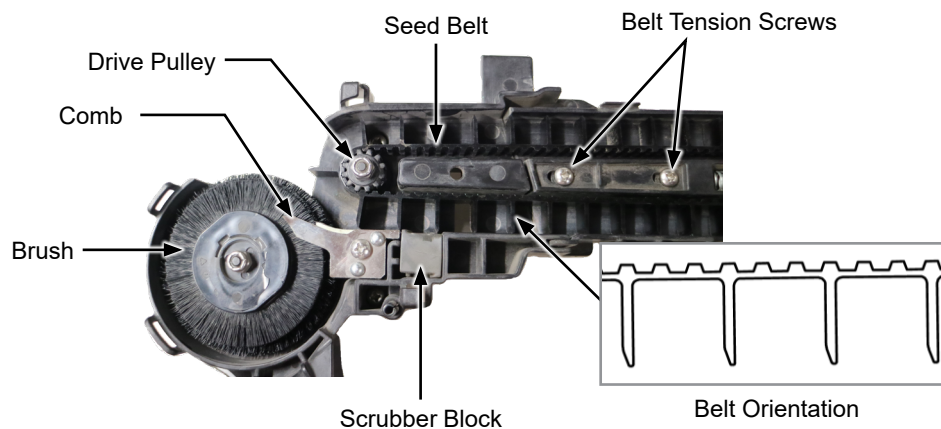

Before every planting season inspect brush wheel and seed belt. Clean or replace as needed.

Turn and reuse other side of scrubber block if one side is worn. Replace if both sides are worn.

Belt Tension Adjustment:

Proper belt tension is necessary for long life and optimum performance of seed delivery system. Excessive belt tension can cause increased wear of upper drive pulley and under tensioned belts can cause faulty seed sensor readings.



Belt Tensioning Procedure:

When installing or changing parts, tensioning belt will be necessary.

1. Loosen belt tension screws.
2. Compress and loosen upper and lower halves of delivery tube to verify the two parts moves freely.
3. Manually pull upper and lower half apart and let go so the two halves are held only by tension spring.
4. Tighten belt tension screws.

Visual Belt Tension Inspection:

Belt tension can also be checked visually without performing the re-tension process. Manually move belt in the correct direction from the return side of the delivery tube. There should be no contact between tips of belt flights and face of delivery tube comb, ribs on scrubber block, or wall edge before seed sensor window. Under tensioned delivery tube belts will usually drag on these surfaces and can also exhibit outward spring around upper drive pulley.

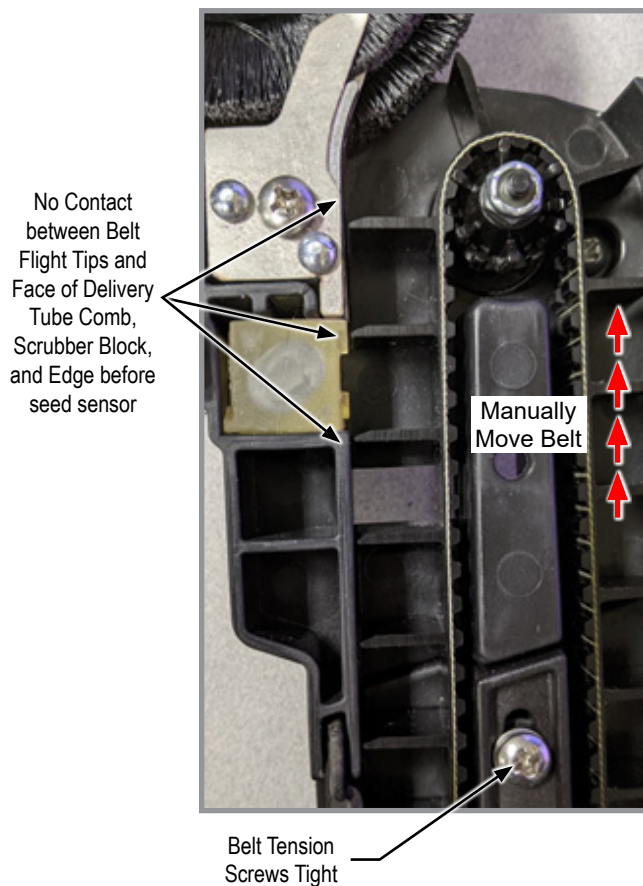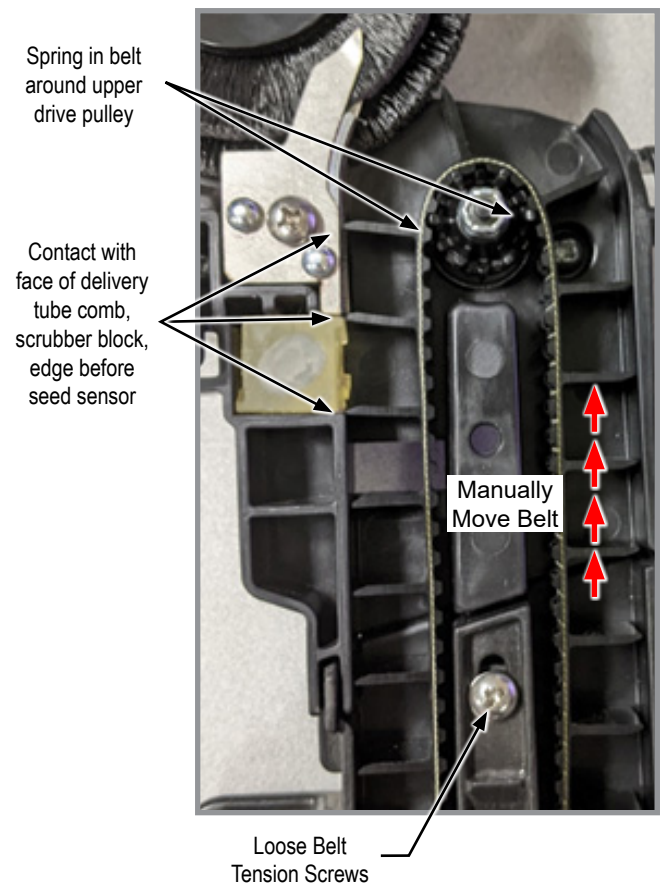Properly Tensioned Belt Characteristics**Under Tensioned Belt Characteristics**


NOTE: Inspect delivery belt after first season of use and re-tension as needed.

Seed Belt Replacement


1. Lift release tab and slide lower housing cover downward. Lift and remove.
2. Unscrew the seed sensor bolt with triangular head and remove seed sensor.
3. Lightly lift under the cover and slide down to release the upper housing cover.
4. Loosen belt tensioning screws.
5. Roll seed belt down and over idler pulley.
6. Replace new belt by aligning on drive pulley and rolling onto lower idler pulley.
7. Re-tension seed belt.

NOTE: Clean drive pulley for proper belt alignment.

NOTE: Seed belt flights should be oriented as shown.

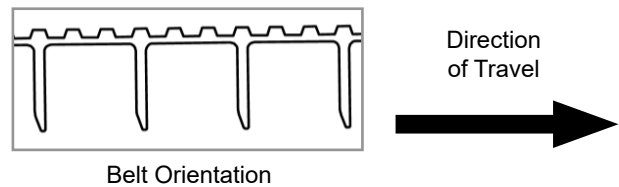

BRUSH WHEEL REPLACEMENT

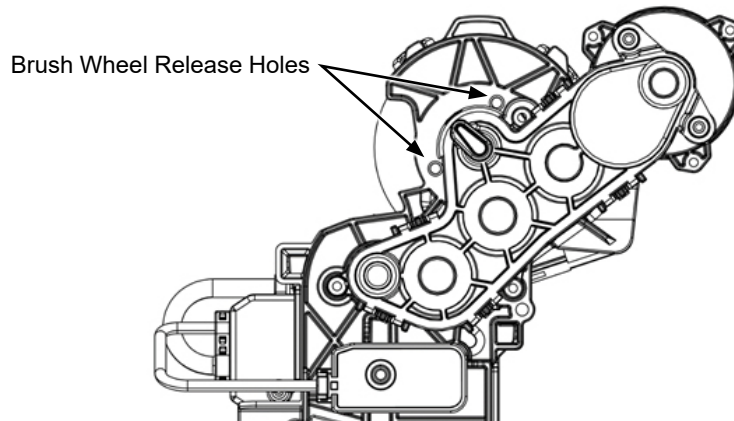

1. Remove retaining locknut on top of brush wheel.
2. Push brush wheel off of drive shaft by threading two seed sensor mounting screws into the brush wheel release holes. Thread screws in evenly on both sides to provide even pressure on brush wheel and prevent damage to shaft or wheel.
3. Replace new brush wheel and locknut.





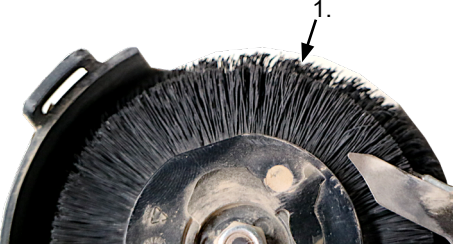
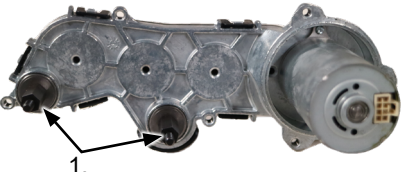
NOTE: Replace locknut after brush wheel replacement if it has been removed more than 5 times as locking feature may be compromised.






NOTE: Poor seed spacing could be caused by missing scrubber block in delivery tube assembly.

NOTE: It is recommended to store delivery tube assemblies in a separate location during off-season to prevent damage from rodents.

NOTE: Be sure nothing is sitting/applying pressure to brush wheel.

MAINTENANCE CHART

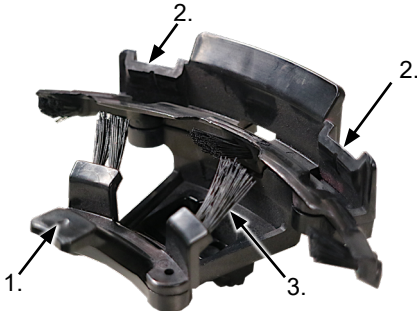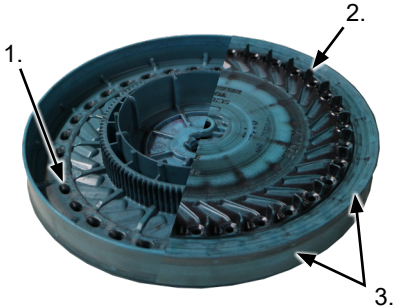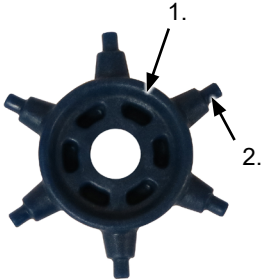COMPONENT	INSPECT	REPLACE	WEAR CHARACTERISTICS	
Singulator	Annually	Every 200 row hectares or as needed		<ol style="list-style-type: none"> 1. Reduced volume of wear indicator. 2. Reduced depth in wear indicator. 3. Reduced brush pack stiffness. 4. Frayed bristles or having a permanent set.
Seed disc	Annually	Every 400 row hectares or as needed		<ol style="list-style-type: none"> 1. Prominent wear on seed orifice edges. 2. Deformed/damaged seed paddles. 3. Pronounced ridges.
Ejector wheel	Annually	Every 200 row hectares or as needed		<ol style="list-style-type: none"> 1. Deformed/damaged ejector wheel punches. 2. Worn ejector pins.
Meter drive gear	Annually	Every 800 row hectares or as needed		<ol style="list-style-type: none"> 1. Deformed/damaged gear teeth. 2. Loose shaft bearings.
Brush wheel	Annually	Every 200 row hectares or as needed		<ol style="list-style-type: none"> 1. Frayed, bent, or broken brush wheel bristles. 2. Missing brush filament. 3. Exposed filament retention wire.
Delivery tube gearbox	Annually	As needed		<ol style="list-style-type: none"> 1. Loose bearings.

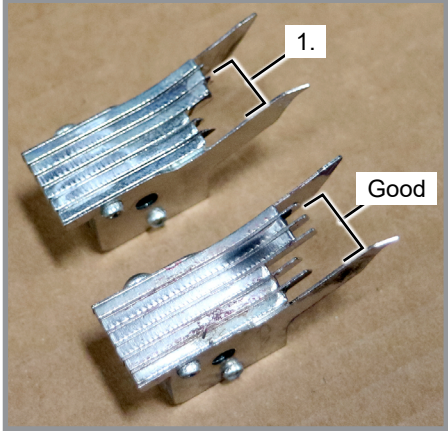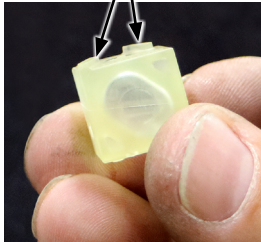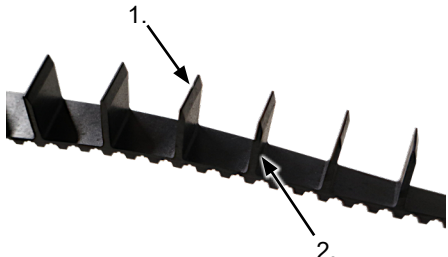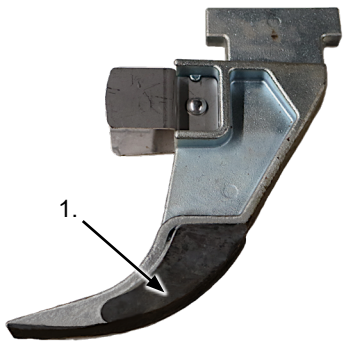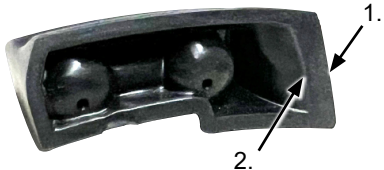COMPONENT	INSPECT	REPLACE	WEAR CHARACTERISTICS	
Comb	Annually	Every 200 row hectares or as needed		1. Reduced comb tip length.
Scrubber block	Annually	Every 200 row hectares or as needed		1. Reduced volume on <u>both</u> sides of block. Replace when ribs are less than .025 tall.
Seed belt	Annually	Every 600 row hectares or as needed		1. Deformed/damaged flight tips. 2. Bent flights.
Scraper	Every 80 row hectares	Every 200 row hectares or as needed		1. Noticeable wear on both scraper pads. Replace when scraper pads are less than 1/16" thick or worn down to the level of the surrounding metal.
Lower Seed Relief	Every 100 row hectares	Every 200 row hectares or as needed		1. Wear on leading edge. 2. Replace when wear line is reached.

PREPARATION FOR STORAGE

- Store planter in a dry sheltered area if possible.
- Remove all trash from row units and frame. Remove dirt that can draw and hold moisture.
- Lubricate planter and row units at all lubrication points.
- Inspect planter for parts that are in need of replacement and order during “off” season.
- Make sure all seed and granular chemical hoppers are empty and clean.
- Remove vacuum hose from each seed meter. Operate vacuum fan at full hydraulic flow from tractor for two minutes to clear manifolds, hoses and fittings of dust and debris.
- Clean breather on analog vacuum and pressure gauges.
- Grease or paint disc openers/blades and row marker disc blades to prevent rust.
- Flush liquid fertilizer tanks, hoses and metering pump with clean water. See “Piston Pump Storage” if applicable.
- Seed Meters and Seed Delivery Tubes:


NOTE: It is recommended to store delivery tube assemblies in a separate location during off-season to prevent damage from rodents.

1. Remove all seed from meter. Blow seed meter clean with air.
2. Remove seed disc and wash with soap and water and dry thoroughly if seed treatment buildup is present.
3. Remove seal, clean with compressed air, and reinstall vacuum seal if debris buildup is observed.
4. Inspect all parts and replace worn parts.
5. Reassemble meter except for seed disc. Store meter and seed tube in a safe dry location.

NOTE: Remove seed discs from meters for annual storage and store them in a safe dry rodent free location.

- Bulk Fill System:

1. Clean out bulk fill hopper, entrainment assembly, and delivery hoses.
2. Disconnect delivery hoses from entrainer ports. Install small orange caps onto ports. Attach hoses to caps.
3. Disconnect delivery hoses from air dissipator at each row unit. Install large orange caps. Attach hoses to caps.

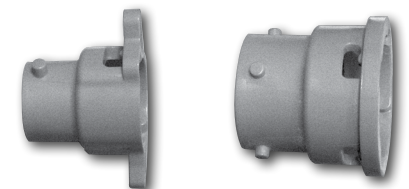

Entrainer Cap

Row Unit Cap

4. Check all bolts and fasteners used to assemble and attach entrainment device are tight.
5. Loosen latches on entrainer cleanout doors to remove pressure from door gasket.
6. Inspect all seed delivery hoses and replace any that are worn, cut, or cracked.


HIGH SPEED SEED METER

PROBLEM	POSSIBLE CAUSE	SOLUTION
Low seed count.	Vacuum level too low.	Increase fan speed.
	Plugged orifices in seed disc.	Inspect and clean disc. Check remnant ejector.
	Loss of vacuum at meter.	Check for foreign material between vacuum cover and disc. Inspect parts for wear/damage. Clean or replace as required.
	Meter Speed too high for current settings	Reduce planting speed and increase vacuum setting.
	Seed sensor not picking up all seeds dropped.	Clean seed sensor lens and delivery tube.
	Brush wheel worn out	Replace brush wheel.
	Wrong seed disc or seed ejector.	Use appropriate disc and ejector for seed type and size.
	Seed size too large for current speed or vacuum setting.	Suggest decreasing ground speed or increasing vacuum.
	Improper meter engagement.	Check meter to delivery tube engagement.
	Vacuum seal worn.	Replace.
	Seed disc worn.	Replace.
	Worn remnant ejector.	Replace.
	Meter baffle door closed too far.	Mix talc thoroughly to coat all seeds. Set baffle to correct setting. Row Unit Operation section.
	Seed bridging in mini hopper.	Add graphite to improve seed flow.
	Failed/worn drive components.	Inspect and replace parts as required.
	Seeds sticking to seed disc.	Use graphite or talc to aid release.
	Seed treatment buildup in seed disc recesses.	Reduce amount of treatment used and or mix thoroughly. Add talc.
	Faulty vacuum gauge reading.	Repair/replace gauge.
	Dirt in vacuum manifold.	Check vacuum manifold for dirt and clean.
	Obstructed delivery tube exit.	Clean delivery tube exit.
Bulk fill pressure too low.	Increase bulk fill pressure.	
High seed count.	Vacuum level too high.	Decrease fan speed.
	Wrong seed disc.	Use appropriate disc for crop.
	Damaged or deformed belts.	Replace belt with new part.
	Baffle setting incorrect.	Lower baffle setting.
	Meter Speed too low for planting conditions or seed type.	Increase planting rate, planting speed, or decrease vacuum
	Meter overfilling with seed.	Decrease speed. Reduce meter baffle door setting.
	Singulator not installed or installed incorrectly.	Install singulator.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Not planting seed.	Low/no vacuum.	Inspect vacuum system and repair as necessary.
	Worn ejector.	Replace ejector.
	Seed bridging in mini hopper.	Add graphite to improve seed flow. Adjust baffle setting
	Meter drive damaged.	Repair/replace drive components.
	Loss of vacuum at meter.	Check for foreign material between vacuum cover and disc. Inspect parts for wear/damage. Clean or replace as required.
	Seed baffle (if applicable) not allowing seed flow due to bridging of seed.	Mix talc thoroughly to coat all seeds. Remove seed baffle. Row Unit Operation section.
	High vacuum.	Adjust vacuum level to appropriate level
	Not stripping seed from the disc.	Replace brush wheel.
	Delivery tube plugged or damaged.	Clean or replace delivery tube.
	Faulty vacuum gauge.	Check gauge line for dirt/obstruction. Repair/replace vacuum gauge.
	Wrong seed disc.	Use appropriate disc for seed type and size.
Poor seed spacing.	Dirt in vacuum manifold.	Check vacuum manifold for dirt and clean.
	Brush wheel worn.	Replace.
	Planting too fast for conditions.	Reduce speed.
	Obstruction in delivery tube.	Clean delivery tube.
	Wrong vacuum setting.	Adjust vacuum to appropriate level.
	Damaged singulator brush pack.	Replace singulator.
	Missing scrubber block.	Insert scrubber block into delivery tube assembly.
	Incorrect singulator state.	Add or remove singulator according to crop type.
	Excess foreign material in seed.	Inspect and clean meter and seed discs. Use clean, undamaged seed.
	Dirty/damaged seed disc.	Inspect seed disc for damage, foreign material in orifices or seed treatment buildup in recesses. Clean or replace.
Irregular seed population.	Incorrect baffle setting.	Set to recommended baffle setting.
	Toolbar not level or wrong height.	Adjust hitch to level toolbar and row units.
	Inspect for worn ejector wheel.	Replace as necessary.
	Dirty seed sensor lens.	Clean seed sensor lens and delivery tube.
	Rough field conditions.	Reduce speed.
	Check for worn comb teeth.	Replace as necessary.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Unable to achieve desired vacuum level.	Vacuum hose pinched/kinked/blocked.	Inspect air lines for any damage or obstruction. Clean air lines and manifold by removing end cap from manifold and running fan at high speed.
	Damaged fan components.	Inspect motor and impeller for wear/damage and repair/replace as necessary.
	Vacuum hose loose/disconnected.	Inspect and reattach all air hoses.
	Dirt in vacuum gauge line.	Check gauge line for dirt/obstruction and clean.
	Abnormally high vacuum required or consistent operation cannot be achieved.	Replace seed disc or vacuum seal.

SEED SENSOR COLOR SCHEME

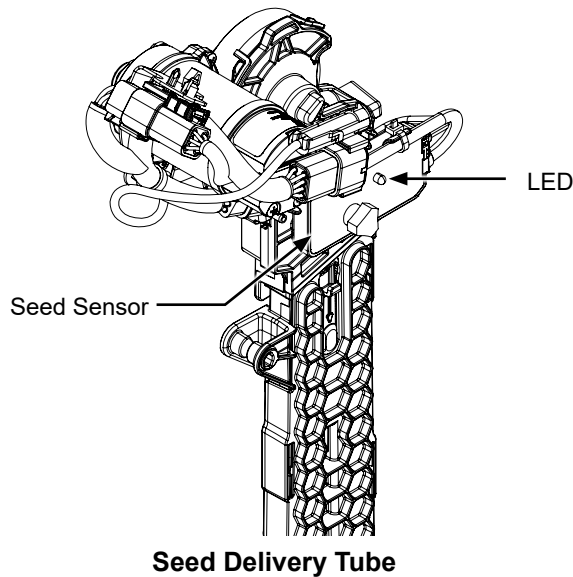

LED COLOR	LED BEHAVIOR	MODE
White	Solid	Sensor in bootloader mode.
Green	Solid	Power ON and running normal.
Red	Blinking	Sensor error. Please reboot system.
Red	Solid	Error. Sensor fault. Replace sensor.
Blue	Solid	Upgrading normally.
Yellow	Heartbeat blink	Seed detected.

NOTE: Solid red light indicates application firmware is not running. Service issue, replace sensor.

KINZE Manufacturing, Inc.

I-80 at Exit 216 North, Williamsburg, Iowa 52361